INSTALLATION MANUAL

VRVIII-C System air conditioner

Installation manual
VRVIII-C System air conditioner — English

Installationsanleitung
VRVIII-C System Klimaanlage — Deutsch

Manuel d'installation
Conditionneur d'air VRVIII-C System — Français

Руководство по монтажу
Кондиционер системы VRVIII-C — Русский

Bruksanvisning
VRVIII-C System Klimaanlegg — Norsk

Bruksanvisning
VRVIII-C System luftkonditionerare — Svenska

Instrukcja obsługi
Klimatyzator VRVIII-C System — Polski

[System]
RTSYQ10PAY1
RTSYQ14PAY1
RTSYQ16PAY1
RTSYQ20PAY1

[Independent units]
RTSQ8PAY1
RTSQ10PAY1
RTSQ12PAY1
RTSQ14PAY1
RTSQ16PAY1
BTSQ20PY1

CE - DECLARATION-OF-CONFORMITY
CE - KONFORMITÄTSERKLÄRUNG
CE - DECLARATION-DE-CONFORMITE
CE - CONFORMITEITSVERKLARING

CE - DECLARACION-DE-CONFORMIDAD
CE - DICHIARAZIONE-DI-CONFORMITA
CE - ΔΗΛΩΣΗ ΣΥΜΜΟΡΦΩΣΗΣ

CE - DECLARAÇÃO-DE-CONFORMIDADE
CE - ЗАЯВЛЕНИЕ-О-СООТВЕТСТВИИ
CE - OPFYLDELSESERKLÆRING
CE - FÖRSÄKRAN-OM-ÖVERENSTÄMMELSE

CE - ERKLÆRING OM-SAMSVAR
CE - ILMOITUS-YHDENMUKAISUUDESTA
CE - PROHLÁŠENÍ-O-SHODĚ

CE - IZJAVA-O-USKLAĐENOSTI
CE - MEGFELELŐSÉGI-NYILATKOZAT
CE - DEKLARACJA-ZGODNOŚCI
CE - DECLARAŢIE-DE-CONFORMITATE

CE - IZJAVA O SKLADNOSTI
CE - VASTAVUSDEKLARATSIOON
CE - ДЕКЛАРАЦИЯ-ЗА-СЪОТВЕТСТВИЕ

CE - ATITIKTIES-DEKLARACIJA
CE - ATBILSTĪBAS-DEKLARĀCIJA
CE - VYHLÁSENIE-ZHODY
CE - UYUMLULUK-BİLDİRİSİ

DAIKIN INDUSTRIES, LTD.

01 (GB) declares under its sole responsibility that the air conditioning models to which this declaration relates:
02 (D) erklärt auf seine alleinige Verantwortung daß die Modelle der Klimageräte für die diese Erklärung bestimmt ist:
03 (F) déclare sous sa seule responsabilité que les appareils d'air conditionné visés par la présente déclaration:
04 (NL) verklaart hierbij op eigen exclusieve verantwoordelijkheid dat de airconditioning units waarop deze verklaring betrekking heeft:
05 (E) declara baja su única responsabilidad que los modelos de aire acondicionado a los cuales hace referencia la declaración:
06 (I) dichiara sotto sua responsabilità che i condizionatori modello a cui è riferita questa dichiarazione:
07 (GR) δηλώνει με αποκλειστική της ευθύνη ότι τα μοντέλα των κλιματιστικών συσκευών στα οποία αναφέρεται η παρούσα δήλωση:
08 (P) declara sob sua exclusiva responsabilidade que os modelos de ar condicionado a que esta declaração se refere:
09 (RUS) заявляет, исключительно под свою ответственность, что модели кондиционеров воздуха, к которым относится настоящее заявление:
10 (DK) erklærer under eneansvar, at klimaanlægmodellerne, som denne deklaration vedrører:
11 (S) deklarerar i egenskap av huvudansvarig, att luftkonditioneringsmodellerna som berörs av denna deklaration innebär att:
12 (N) erklærer et fullstendig ansvar for at de luftkondisjoneringsmodeller som berøres av denne deklarasjon innebærer at:
13 (FIN) ilmoittaa yksinomaan omalla vastuullaan, että tämän ilmoituksen tarkoittamat ilmastointilaitteiden mallit:
14 (CZ) prohlašuje ve své plné odpovědnosti, že modely klimatizace, k nimž se toto prohlášení vztahuje:
15 (HR) izjavljuje pod isključivo vlastitom odgovornošću da su modeli klima uređaja na koje se ova izjava odnosi:
16 (H) teljes felelőssége tudatában kijelenti, hogy a klímaberendezés modellek, melyekre e nyilatkozat vonatkozik:
17 (PL) deklaruje na własną i wyłączną odpowiedzialność, że modele klimatyzatorów, których dotyczy niniejsza deklaracja:
18 (RO) declară pe proprie răspundere că aparatele de aer condiţionat la care se referă această declaraţie:
19 (SLO) z vso odgovornostjo izjavlja, da so modeli klimatskih naprav, na katere se izjava nanaša:
20 (EST) kinnitab oma täielikul vastutusel, et käesoleva deklaratsiooni alla kuuluvad kliimaseadmete mudelid:
21 (BG) декларира на своя отговорност, че моделите климатична инсталация, за които се отнася тази декларация:
22 (LT) visiška savo atsakomybe skelbia, kad oro kondicionavimo prietaisų modeliai, kuriems yra taikoma ši deklaracija:
23 (LV) ar pilnu atbildību apliecina, ka tālāk uzskaitīto modeļu gaisa kondicionētāji, uz kuriem attiecas šī deklarācija:
24 (SK) vyhlasuje na vlastnú zodpovednosť, že tieto klimatizačné modely, na ktoré sa vzťahuje toto vyhlásenie:
25 (TR) tamamen kendi sorumluluğunda olmak üzere bu bildirinin ilgili olduğu klima modellerinin aşağıdaki gibi olduğunu beyan eder:

RTSYQ10PAY1, RTSYQ14PAY1, RTSYQ16PAY1, RTSYQ20PAY1, RTSQ8PAY1, RTSQ10PAY1, RTSQ12PAY1, RTSQ14PAY1, RTSQ16PAY1,BTSQ20PY1

01 are in conformity with the following standard(s) or other normative document(s), provided that these are used in accordance with our instructions:
02 der/den folgenden Norm(en) oder einem anderen Normdokument oder -dokumenten entspricht/entsprechen, unter der Voraussetzung, daß sie gemäß unseren Anweisungen eingesetzt werden:
03 sont conformes à la/aux norme(s) ou autre(s) document(s) normatif(s), pour autant qu'ils soient utilisés conformément à nos instructions:
04 conform de volgende norm(en) of één of meer andere bindende documenten zijn, op voorwaarde dat ze worden gebruikt overeenkomstig onze instructies:
05 están en conformidad con la(s) siguiente(s) norma(s) u otro(s) documento(s) normativo(s), siempre que sean utilizados de acuerdo con nuestras instrucciones:
06 sono conformi al(i) seguente(i) standard(s) o altro(i) documento(i) a carattere normativo, a patto che vengano usati in conformità alle nostre istruzioni:
07 είναι σύμφωνα με το(α) ακόλουθο(α) πρότυπο(α) ή άλλο έγγραφο(α) κανονισμών, υπό την προϋπόθεση ότι χρησιμοποιούνται σύμφωνα με τις οδηγίες μας:
08 estão em conformidade com a(s) seguinte(s) norma(s) ou outro(s) documento(s) normativo(s), desde que estes sejam utilizados de acordo com as nossas instruções:
09 соответствуют следующим стандартам или другим нормативным документам, при условии их использования согласно нашим инструкциям:
10 overholder følgende standard(er) eller andet/andre retningsgivende dokument(er), forudsat at disse anvendes i henhold til vore instrukser:
11 respektive utrustning är utförd i överensstämmelse med och följer följande standard(er) eller andra normgivande dokument, under förutsättning att användning sker i överensstämmelse med våra instruktioner:
12 respektive utstyr er i overensstemmelse med følgende standard(er) eller andre normgivende dokument(er), under forutssetning av at disse brukes i henhold til våre instrukser:
13 vastaavat seuraavien standardien ja muiden ohjeellisten dokumenttien vaatimuksia edellyttäen, että niitä käytetään ohjeidemme mukaisesti:
14 za předpokladu, že jsou využívány v souladu s našimi pokyny, odpovídají následujícím normám nebo normativním dokumentům:
15 u skladu sa slijedećim standardom(ima) ili drugim normativnim dokumentom(ima), uz uvjet da se oni koriste u skladu s našim uputama:
16 megfelelnek az alábbi szabvány(ok)nak vagy egyéb irányadó dokumentum(ok)nak, ha azokat előírás szerint használják:
17 spełniają wymogi następujących norm i innych dokumentów normalizacyjnych, pod warunkiem że używane są zgodnie z naszymi instrukcjami:
18 sunt în conformitate cu următorul (următoarele) standard(e) sau alt(e) document(e) normativ(e), cu condiţia ca acestea să fie utilizate în conformitate cu instrucţiunile noastre
19 skladni z naslednjimi standardi in drugimi normativi, pod pogojem, da se uporabljajo v skladu z našimi navodili:
20 on vastavuses järgmis(t)e standardi(te)ga või teiste normatiivsete dokumentidega, kui neid kasutatakse vastavalt meie juhenditele:
21 съответстват на следните стандарти или други нормативни документи, при условие, че се използват съгласно нашите инструкции:
22 atitinka žemiau nurodytus standartus ir (arba) kitus norminius dokumentus su sąlyga, kad yra naudojami pagal mūsų nurodymus:
23 tad, ja lietoti atbilstoši ražotāja norādījumiem, atbilst sekojošiem standartiem un citiem normatīviem dokumentiem:
24 sú v zhode s nasledovnou(ými) normou(ami) alebo iným(i) normatívnym(i) dokumentom(ami), za predpokladu, že sa používajú v súlade s našim návodom:
25 ürünün, talimatlarımıza göre kullanılması koşuluyla aşağıdaki standartlar ve norm belirten belgelerle uyumludur:

EN60335-2-40,

01 following the provisions of:
02 gemäß den Vorschriften der:
03 conformément aux stipulations des:
04 overeenkomstig de bepalingen van:
05 siguiendo las disposiciones de:
06 secondo le prescrizioni per:
07 με τήρηση των διατάξεων των:
08 de acordo com o previsto em:
09 в соответствии с положениями:
10 under iagttagelse af bestemmelserne i:
11 enligt villkoren i:
12 gitt i henhold til bestemmelsene i:
13 noudattaen määräyksiä:
14 za dodržení ustanovení předpisu:
15 prema odredbama:
16 követi a(z):
17 zgodnie z postanowieniami Dyrektyw:
18 în urma prevederilor:
19 ob upoštevanju določb:
20 vastavalt nõuetele:
21 следвайки клаузите на:
22 laikantis nuostatų, pateikiamų:
23 ievērojot prasības, kas noteiktas:
24 održiavajúc ustanovenia:
25 bunun koşullarına uygun olarak:

Machinery 2006/42/EC **
Electromagnetic Compatibility 2004/108/EC *

01 Directives, as amended.
02 Direktiven, gemäß Änderung.
03 Directives, telles que modifiées.
04 Richtlijnen, zoals geamendeerd.
05 Directivas, según lo enmendado.
06 Direttive, come da modifica.
07 Οδηγιών, όπως έχουν τροποποιηθεί.
08 Directivas, conforme alteração em.
09 Директив со всеми поправками.
10 Direktiver, med senere ændringer.
11 Direktiv, med företagna ändringar.
12 Direktiver, med foretatte endringer.
13 Direktiivejä, sellaisina kuin ne ovat muutettuina.
14 v platném znění.
15 Smjernice, kako je izmijenjeno.
16 irányelv(ek) és módosításaik rendelkezéseit.
17 z późniejszymi poprawkami.
18 Directivelor, cu amendamentele respective.
19 Direktive z vsemi spremembami.
20 Direktiivid koos muudatustega.
21 Директиви, с техните изменения.
22 Direktyvose su papildymais.
23 Direktīvās un to papildinājumos.
24 Smernice, v platnom znení.
25 Değiştirilmiş halleriyle Yönetmelikler.

01	**Note** *	as set out in **<A>** and judged positively by **<B>** according to the **Certificate <C>**.	**06**	**Nota** *	delineato nel **<A>** e giudicato positivamente da **<B>** secondo il **Certificato <C>**.	**11**	**Information** *	enligt **<A>** och godkänts av **<B>** enligt **Certifikatet <C>**.	**16**	**Megjegyzés** *	a(z) **<A>** alapján, a(z) **<B>** igazolta a megfelelést, a(z) **<C>** **tanúsítvány** szerint.	**21**	**Забележка** *	както е изложено в **<A>** и оценено положително от **<B>** съгласно **Сертификата <C>**.
02	**Hinweis** *	wie in der **<A>** aufgeführt und von **<B>** positiv beurteilt gemäß **Zertifikat <C>**.	**07**	**Σημείωση** *	όπως καθορίζεται στο **<A>** και κρίνεται θετικά από το **<B>** σύμφωνα με το **Πιστοποιητικό <C>**.	**12**	**Merk** *	som det fremkommer i **<A>** og gjennom positiv bedømmelse av **<B>** ifølge **Sertifikat <C>**.	**17**	**Uwaga** *	zgodnie z dokumentacją **<A>**, pozytywną opinią **<B>** i **Świadectwem <C>**.	**22**	**Pastaba** *	kaip nustatyta **<A>** ir kaip teigiamai nuspręsta **<B>** pagal **Sertifikatą <C>**.
03	**Remarque** *	tel que défini dans **<A>** et évalué positivement par **<B>** conformément au **Certificat <C>**.	**08**	**Nota** *	tal como establecido en **<A>** e com o parecer positivo de **<B>** de acordo com o **Certificado <C>**.	**13**	**Huom** *	jotka on esitetty asiakirjassa **<A>** ja jotka **<B>** on hyväksynyt **Sertifikaatin <C>** mukaisesti.	**18**	**Notă** *	aşa cum este stabilit în **<A>** şi apreciat pozitiv de **<B>** în conformitate cu **Certificatul <C>**.	**23**	**Piezīmes** *	kā norādīts **<A>** un atbilstoši **<B>** pozitīvajam vērtējumam saskaņā ar **sertifikātu <C>**.			
04	**Bemerk** *	zoals vermeld in **<A>** en positief beoordeeld door **<B>** overeenkomstig **Certificaat <C>**.	**09**	**Примечание** *	как указано в **<A>** и в соответствии с положительным решением **<B>** согласно **Свидетельству <C>**.	**14**	**Poznámka** *	jak bylo uvedeno v **<A>** a pozitivně zjištěno **<B>** v souladu s **osvědčením <C>**.	**19**	**Opomba** *	kot je določeno v **<A>** in odobreno s strani **<B>** v skladu s **certifikatom <C>**.	**24**	**Poznámka** *	ako bolo uvedené v **<A>** a pozitívne zistené **<B>** v súlade s **osvedčením <C>**.			
05	**Nota** *	como se establece en **<A>** y es valorado positivamente por **<B>** de acuerdo con el **Certificado <C>**.	**10**	**Bemærk** *	som anført i **<A>** og positivt vurderet af **<B>** i henhold til **Certifikat <C>**.	**15**	**Napomena** *	kako je izloženo u **<A>** i pozitivno ocijenjeno od strane **<B>** prema **Certifikatu <C>**.	**20**	**Märkus** *	nagu on näidatud dokumendis **<A>** ja heaks kiidetud **<B>** järgi vastavalt **sertifikaadile <C>**.	**25**	**Not** *	**<A>**'da belirtildiği gibi ve **<C>** **Sertifikasına** göre **<B>** tarafından olumlu olarak değerlendirildiği gibi.			

<A>	**DAIKIN.TCF.024E13/12-2011**
<B>	**TÜV Rheinland EPS B.V.**
<C>	**0510260101**

01** Daikin Europe N.V. is authorised to compile the Technical Construction File.
02** Daikin Europe N.V. hat die Berechtigung die Technische Konstruktionsakte zusammenzustellen.
03** Daikin Europe N.V. est autorisé à compiler le Dossier de Construction Technique.
04** Daikin Europe N.V. is bevoegd om het Technisch Constructiedossier samen te stellen.
05** Daikin Europe N.V. está autorizado a compilar el Archivo de Construcción Técnica.
06** Daikin Europe N.V. è autorizzata a redigere il File Tecnico di Costruzione.
07** Η Daikin Europe N.V. είναι εξουσιοδοτημένη να συντάξει τον Τεχνικό φάκελο κατασκευής.
08** A Daikin Europe N.V. está autorizada a compilar a documentação técnica de fabrico.
09** Компания Daikin Europe N.V. уполномочена составить Комплект технической документации.
10** Daikin Europe N.V. er autoriseret til at udarbejde de tekniske konstruktionsdata.
11** Daikin Europe N.V. är bemyndigade att sammanställa den tekniska konstruktionsfilen.
12** Daikin Europe N.V. har tillatelse til å kompilere den Tekniske konstruksjonsfilen.
13** Daikin Europe N.V. on valtuutettu laatimaan Teknisen asiakirjan.
14** Společnost Daikin Europe N.V. má oprávnění ke kompilaci souboru technické konstrukce.
15** Daikin Europe N.V. je ovlašten za izradu Datoteke o tehničkoj konstrukciji.
16** A Daikin Europe N.V. jogosult a műszaki konstrukciós dokumentáció összeállítására.
17** Daikin Europe N.V. ma upoważnienie do zbierania i opracowywania dokumentacji konstrukcyjnej.
18** Daikin Europe N.V. este autorizat să compileze Dosarul tehnic de construcţie.
19** Daikin Europe N.V. je pooblaščen za sestavo datoteke s tehnično mapo.
20** Daikin Europe N.V. on volitatud koostama tehnilist dokumentatsiooni.
21** Daikin Europe N.V. е оторизирана да състави Акта за техническа конструкция.
22** Daikin Europe N.V. yra įgaliota sudaryti šį techninės konstrukcijos failą.
23** Daikin Europe N.V. ir autorizēts sastādīt tehnisko dokumentāciju.
24** Spoločnosť Daikin Europe N.V. je oprávnená vytvoriť súbor technickej konštrukcie.
25** Daikin Europe N.V. Teknik Yapı Dosyasını derlemeye yetkilidir.

Daikin Europe N.V., Zandvoordestraat 300, B-8400 Oostende Belgium

3P311909-1

DAIKIN

Shinri Sada

Shinri Sada
Manager Quality Control Department
1st. of Feb. 2012

DAIKIN INDUSTRIES, LTD.
Umeda Center Bldg., 2-4-12, Nakazaki-Nishi,
Kita-ku, Osaka, 530-8323 Japan

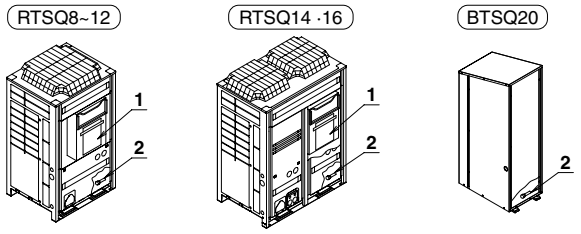

figure 1

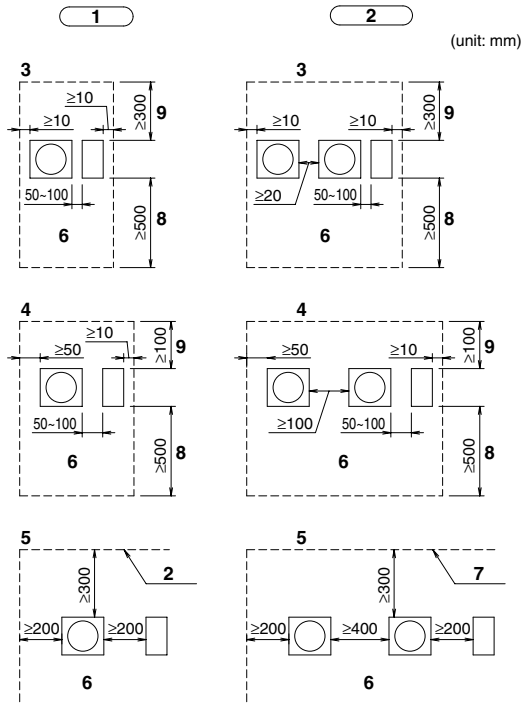

figure 2

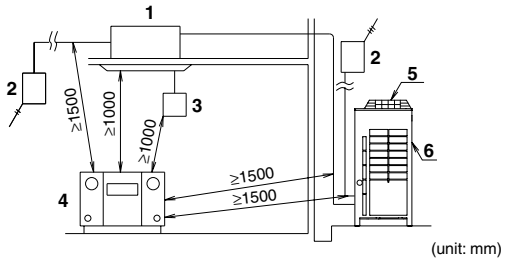

figure 3

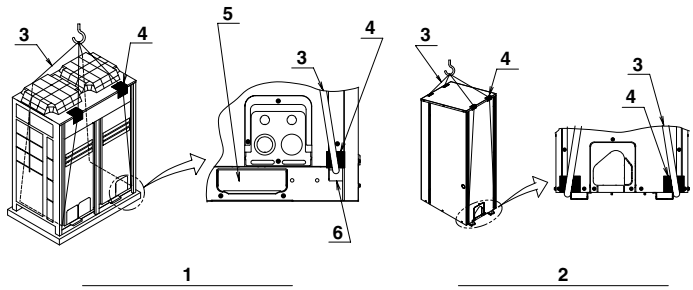

figure 4

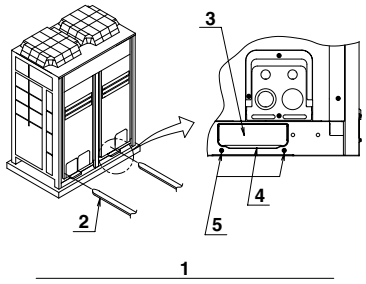

figure 5

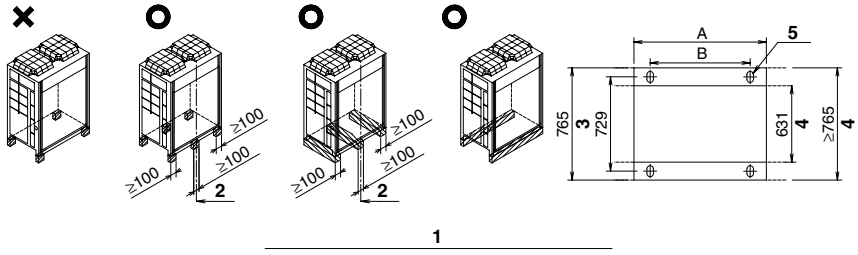

figure 6

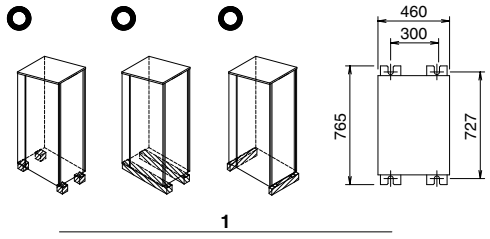

figure 7

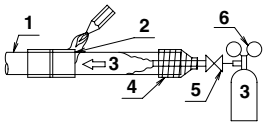

figure 8

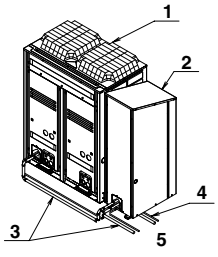

figure 9

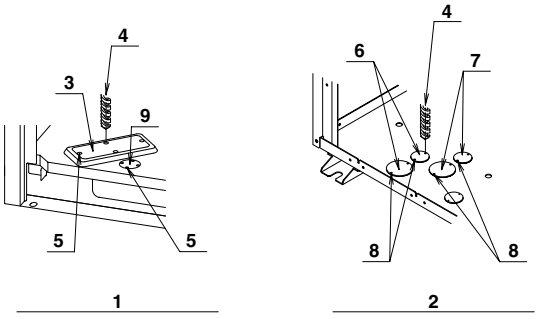

figure 10

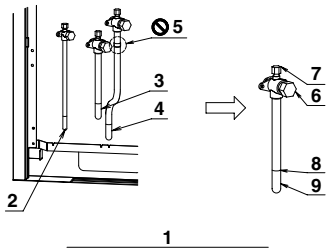

figure 11

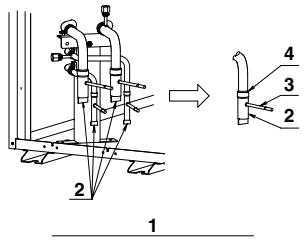

figure 12

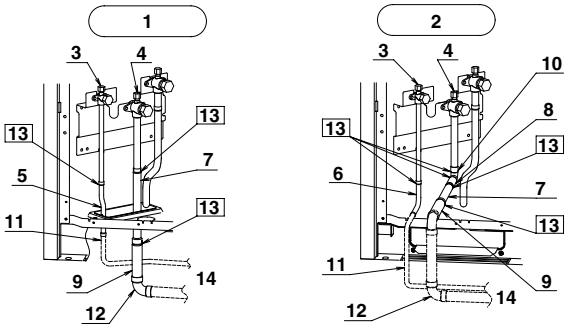

figure 13

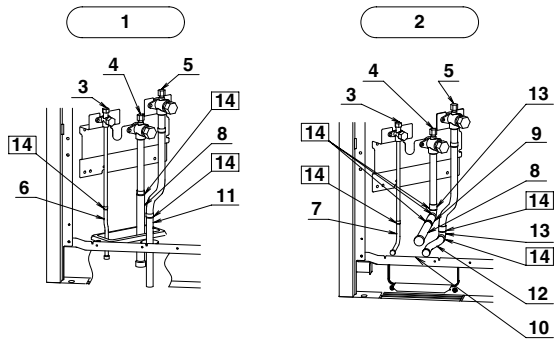

figure 14

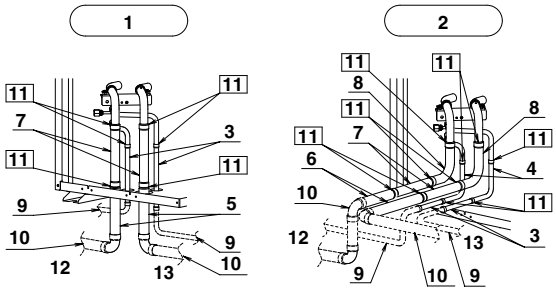

figure 15

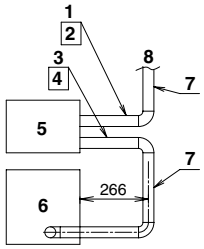

figure 16

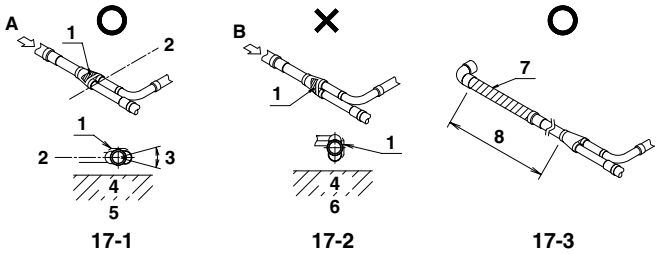

figure 17

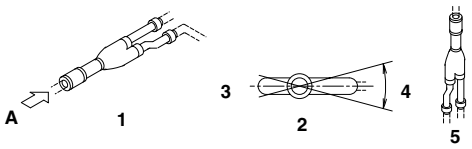

figure 18



figure 19

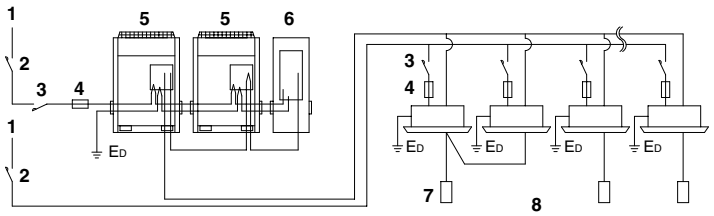

figure 20

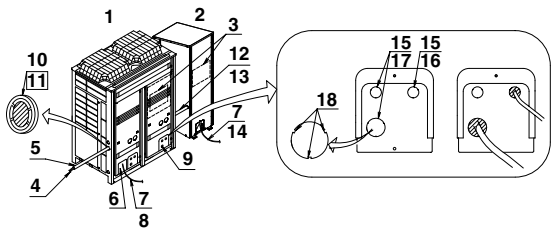

figure 21

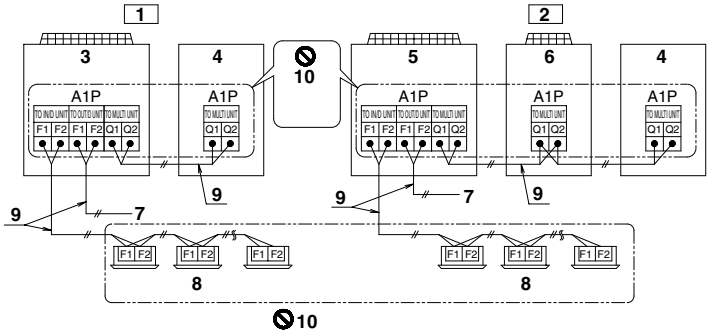

figure 22

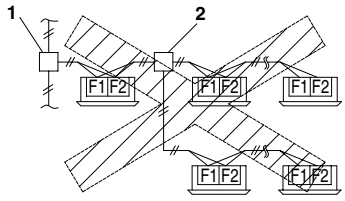

figure 23

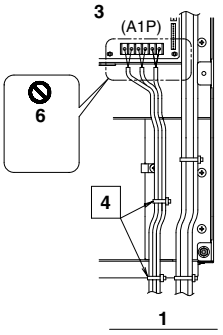

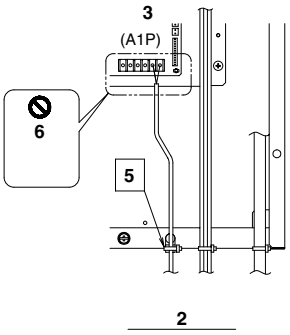

figure 24

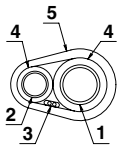

figure 25

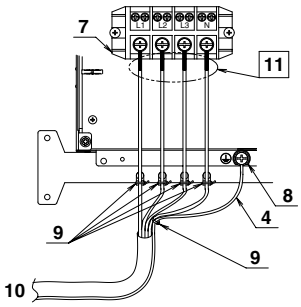

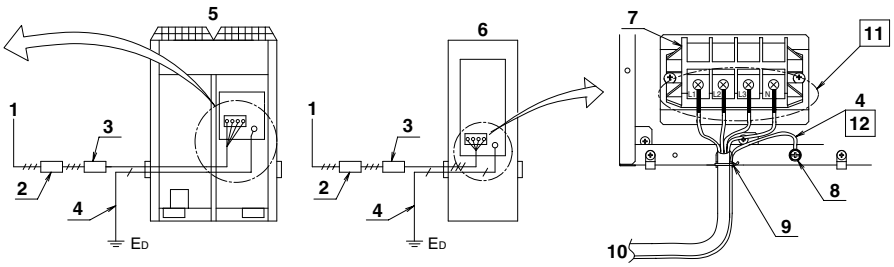

figure 26

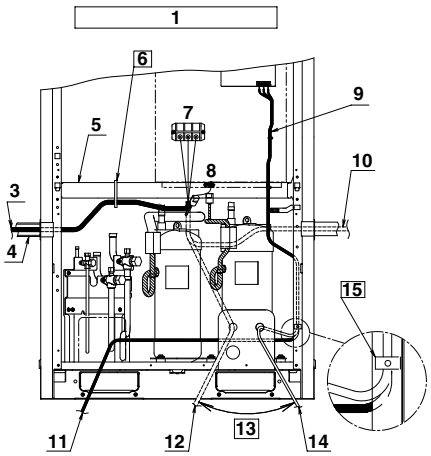

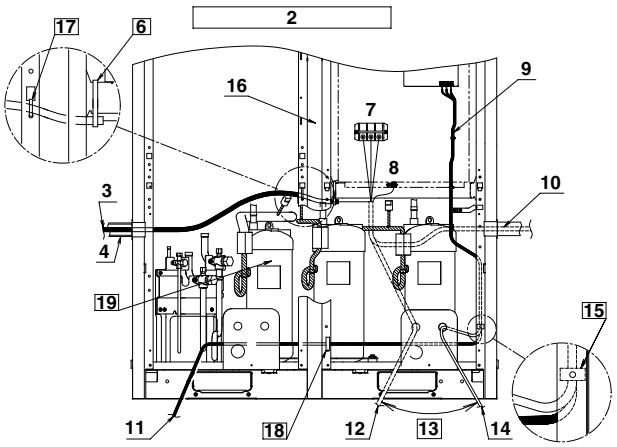

figure 27

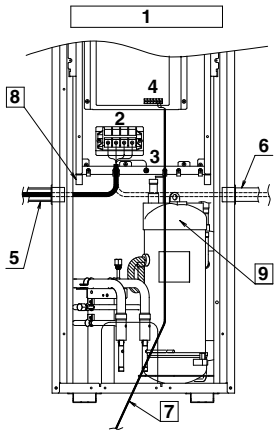

figure 28

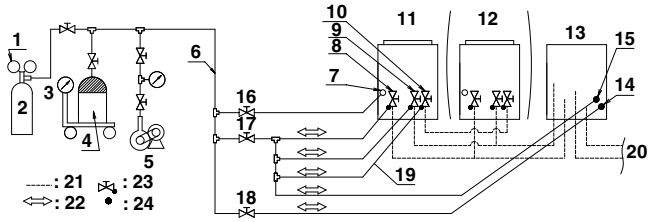

figure 29

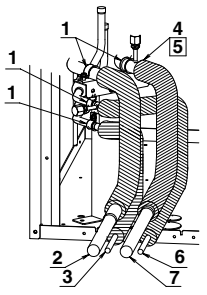

figure 30

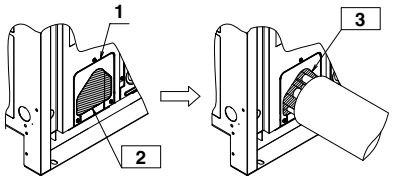

figure 31

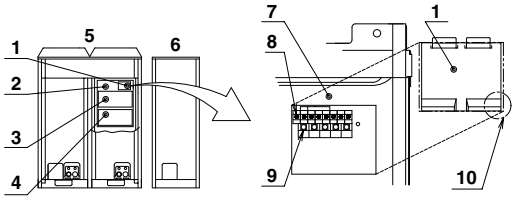

figure 32

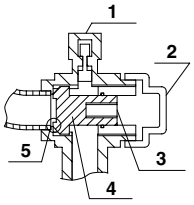

figure 33

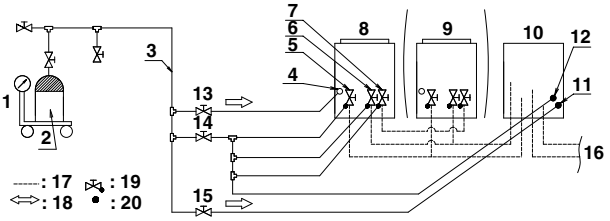

figure 34

CONTENTS

1. FIRST OF ALL 1
1-1. Safety precautions 1
1-2. Special notice of product 2
1-3. Disposal requirements 2
2. INTRODUCTION 2
2-1. About product 2
2-2. Technical and Electrical specifications 3
2-3. Main components 3
2-4. Combination 3
2-5. Standard supplied accessories 3
2-6. Option accessory 3
3. SELECTION OF LOCATION 4
4. INSPECTING AND HANDLING THE UNIT 4
5. PLACING THE UNIT 5
6. REFRIGERANT PIPING 5
6-1. Selection of piping material and Refrigerant branching kit 5
6-2. Protection against contamination when installing pipes 5
6-3. Pipe connection 5
6-4. Connecting the refrigerant piping 6
6-5. Example of connection 9
7. FIELD WIRING 12
7-1. Power circuit, safety device and cable requirements 12
7-2. Wiring Connection Example for Whole System 12
7-3. Leading wire Procedure 13
7-4. Transmission Wiring Connection Procedure 13
7-5. Power Wiring Connection Procedure 13
7-6. Procedure for Wiring Inside Units 14
8. TESTS AND INSULATION WORK 14
8-1. Air tight test and vacuum drying 14
8-2. Pipe insulation 15
8-3. Checking of device and installation conditions 15
9. ADDITIONAL REFRIGERANT CHARGE AND CHECK OPERATION 16
9-1. Before working 16
9-2. Procedure of Additional Refrigerant charging 18
9-3. Procedure of check operation 20
10. ONSITE SETTINGS 20
11. TEST RUN 21
11-1.Before test run 21
11-2.Test Run 21
11-3.Checks After Test Run 21
12. CAUTION FOR REFRIGERANT LEAKS 21

The English text is the original instruction. Other languages are translations of the original instructions.

1. FIRST OF ALL

- This document is an installation manual for the Daikin RTSYQ-P Series VRV Inverter. Before installing the unit, read this manual thoroughly, and following the instructions contained in it.
- After installation, do a test run to make sure the unit runs properly, and then explain how to operate and take care of the unit to the customer, using the operation manual.
- Lastly, make sure the customer keeps this manual, along with the operation manual, in a safe place.

1-1 Safety precautions

Please read these “Safety precautions” carefully before installing air conditioning unit and be sure to install it correctly.

Meaning of WARNING and CAUTION notices
Both are important notices for safety. Be sure to follow them.

⚠ **Warning**.....Failure to follow these instructions properly may result in personal injury or loss of life.

⚠ **Caution**.....Failure to observe these instructions properly may result in property damage or personal injury, which may be serious depending on the circumstances.

After completing installation, conduct a test operation to confirm that the equipment operates without any problems. Then, explain to the customer how to operate the equipment and take care of it following the operation manual.
Ask the customer to store the installation manual along with the operation manual for future reference.

⚠ **Warning**

- Ask your dealer or qualified personnel to carry out installation work. Do not attempt to install the air conditioner yourself. Improper installation may result in water leakage, electric shocks or fire.
- Install the air conditioner in accordance with the instructions in this installation manual.
  Improper installation may result in water leakage, electric shocks or fire.
- When installing the unit in a small room, take measures so that the refrigerant may not exceed the limiting concentration in the event of refrigerant leakage.
  Contact your dealer for further information. If the refrigerant leaks and exceeds the limiting concentration, it may lead to oxygen deficiency.
- Be sure to use only the specified accessories and parts for installation work.
  Failure to use the specified parts may result in the unit falling, water leakage, electric shocks or fire.
- Install the air conditioner on a foundation strong enough to withstand the weight of the unit.
  If a foundation does not have sufficient strength, the equipment may fall and cause injury.
- Carry out the required installation work in consideration of strong winds, typhoons or earthquakes.
  If the installation work is not properly carried out, the unit may fall down and cause accidents.
- The electrical work must be carried out by the qualified electrician in accordance with the local and national regulations and this installation manual. Make sure to provide a dedicated power supply circuit and never connect additional wiring to the existing circuit.
  An insufficient power supply capacity or improper electrical work may lead to electric shocks or fire.
- Be sure to earth the air conditioner.
  Do not earth the unit to a utility pipe, lightning conductor or telephone earth lead. Imperfect earthing may result in electric shocks or fire.
  A high surge current from lightning or other sources may cause damage to the air conditioner.
- Be sure to install an earth leakage breaker.
  Failure to install an earth leakage breaker may result in electric shocks or fire.
- Be sure to switch off the unit before touching any electrical parts.
  Touching a live part may result in electric shock.
- For wiring, use the specified wires and connect and fasten them firmly so that no external force from the wires may be applied to the terminal connections.
  If the wires are not firmly connected and fastened, it may cause heating, fire or the like.
- When wiring the power supply and connecting the remote controller wiring and transmission wiring, position the wires so that the EL. COMPO. BOX lid can be securely fastened.
  Improper positioning of the EL. COMPO. BOX lid may result in electric shocks, fire or the terminals overheating.
- If refrigerant gas leaks during installation, ventilate the area immediately.
  Toxic gas may be produced if the refrigerant comes into contact with fire.
- After completing installation, check for refrigerant gas leakage.
  Toxic gas may be produced if the refrigerant gas leaks into the room and comes into contact with a source of fire, such as a fan heater, stove or cooker.

- Do not directly touch refrigerant that has leaked from refrigerant pipes or other areas, as there is a danger of frostbite.
- Do not allow children to climb on the outdoor unit or function unit and avoid placing objects on the unit.
  Injury may result if the unit becomes loose and falls.

⚠ Caution

- Carry out drain piping properly following this installation manual and insulate the pipe to prevent condensation.
  Improper drain piping may result in indoor water leakage and property damage.
- Install the indoor, outdoor and function units, power cord and connecting wires at least 1 meter away from televisions or radios to prevent picture interference and noise.
  (Depending on the incoming signal strength, a distance of 1 meter may not be sufficient to eliminate noise.)
- Install the indoor unit as far as possible from fluorescent lamps.
  If a wireless kit is installed in a room where the electronic lighting type (inverter or rapid start types) fluorescent lamps exist, the transmitting distance of a remote controller may be shorter.
- Make sure to provide for adequate measures in order to prevent that the outdoor unit be used as a shelter by small animals.
  Small animals making contact with electrical parts can cause malfunctions, smoke or fire. Please instruct the customer to keep the area around the unit clean.
- Do not install the air conditioner in the following locations:
  1. Where there is a high concentration of mineral oil spray or vapour (e.g. a kitchen).
     Plastic parts may deteriorate and cause parts to fall off or water to leak.
  2. Where corrosive gas, such as sulphurous acid gas, is produced.
     Corrosion of copper pipes or brazed parts may occur and cause refrigerant leakage.
  3. Where there is a machine that generates electromagnetic wave and where voltage fluctuation often occurs such as a factory.
     Control system may malfunction and as a result the unit may not properly operate.
  4. Where flammable gas may leak, where there is carbon fibre or ignitable dust suspensions in the air, or where volatile flammables such as paint thinner or gasoline are handled.
     Operating the unit in such conditions may result in fire.
- The air conditioner is not intended for use in a potentially explosive atmosphere.

1-2 Special notice of product

[CLASSIFICATION]
This air conditioner comes under the term “appliances not accessible to the general public”.

[EMC CHARACTERISTICS]
This system is a class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

[REFRIGERANT]
This system use R410A refrigerant.

- The refrigerant R410A requires that strict precautions be observed for keeping the system clean, dry and tightly sealed.
  Read the chapter “REFRIGERANT PIPING” carefully and follow these procedures correctly.
  A. Clean and dry
     Strict measures must be taken to keep impurities (including SUNISO oil and other mineral oils as well as moisture) out of the system.
  B. Tightly sealed
     Take care to keep the system tight when installing.
     R410A contains no chlorine, does not destroy the ozone layer and so does not reduce the earth’s protection against harmful ultraviolet radiation. R410A will contribute only slightly to the greenhouse effect if released into the atmosphere.
- Since R410A is a mixed refrigerant, the required additional refrigerant must be charged in its liquid state. (If the system is charged with refrigerant in its gaseous state, due to composition change, the system will not function normally.)

Limit by the total maximum refrigerant charge
The total maximum refrigerant charge of a VRV system must be below 100kg, this to be in accordance with CE requirement (EN60335-2-40 standard).
This means that in case the total maximum refrigerant charge of the system (factory and additional charge) is equal to or more than 100kg you must divide your multiple outdoor system into smaller independent systems, each containing less than 100kg refrigerant charge.
For factory charge, refer to the unit name plate.

Important information regarding the refrigerant used
This product contains fluorinated greenhouse gases covered by the Kyoto Protocol. Do not vent gases into the atmosphere.
Refrigerant type : R410A
GWP (1) value : 1975
(1) GWP = global warming potential
Please fill in with indelible ink,

- ■ ① the factory refrigerant charge of the product,
- ■ ② the additional refrigerant amount charged in the field and
- ■ ① + ② the total refrigerant charge on the refrigerant charge label supplied with the product.
  The filled out label must be adhered in the proximity of the product charging port (e.g. onto the inside of the service cover).

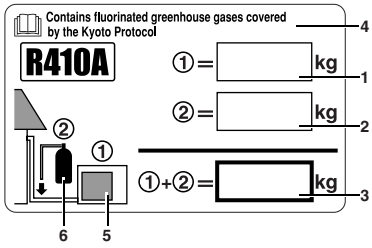

1 factory refrigerant charge of the product : see unit name plate (2)
2 additional refrigerant amount charged in the field
3 total refrigerant charge
4 Contains fluorinated greenhouse gases covered by the Kyoto Protocol
5 outdoor unit
6 refrigerant cylinder and manifold for charging

(2) In case of multiple outdoor systems, only 1 label must be adhered, mentioning the total factory refrigerant charge of all outdoor units connected on the refrigerant system.

[DESIGN PRESSURE]
Since design pressure is 4.0MPa or 40bar (for R407C units : 3.3MPa or 33bar), the wall thickness of pipes should be more carefully selected in accordance with the relevant local and national regulations.

1-3 Disposal requirements

Disposal requirements
Dismantling of the unit, treatment of the refrigerant, of oil and of other parts must be done in accordance with relevant local and national legislation.

2. INTRODUCTION

Note

- This manual provides information on the installation of the outdoor unit and function unit. Follow the instructions provided in the manual and install both the outdoor unit and function unit.
- For the installation of the indoor unit, refer to the installation manual provided with the indoor unit.
- Option accessories (sold separately) are required for the installation of the products. Refer to “**2-6 Option accessory**” for details.

2-1 About product

- RTSYQ-P series are designed for outdoor installation and used for cooling and heating aplications. The outdoor system consists of the RTSQ8-16P outdoor unit and BTSQ20P function unit in combination.
  Only the outdoor unit or function unit cannot be used independently.
  Refer to “**2-4 Combination**” for concrete system configurations.
  With this system, rated cooling capacity from 28.0kW to 55.9kW and rated heating capacity from 31.5kW to 62.5kW can be achieved.

- The indoor units that combined with RTSYQ-PA system for air conditioning are Daikin VRV series indoor units that compatible with R410A. To learn which indoor units are compatible with R410A, refer to the product catalogs. To combine with other refrigerant indoor unit will cause malfunction.

2-2 Technical and Electrical specifications

Refer to the Engineering Data Book for the complete list of specifications.

2-3 Main components

For main components and function of the main components, refer to the Engineering Data Book.

2-4 Combination

- The following table shows a list of system names, system configuration models, and the capacity of each connectable indoor unit.

<Single outdoor unit system>

System name	Composition unit		Total capacity of indoor units
	Outdoor unit	Function unit	
RTSYQ10PAY1	RTSQ10PAY1	BTSQ20PY1	125 - 325
RTSYQ14PAY1	RTSQ14PAY1	BTSQ20PY1	175 - 455
RTSYQ16PAY1	RTSQ16PAY1	BTSQ20PY1	200 - 520

* The RTSQ8PA or RTSQ12PA unit cannot be used as a configuration unit of single outdoor unit system.

<Multi outdoor unit system>

System name	Composition unit		Total capacity of indoor units
	Outdoor unit	Function unit	
RTSYQ20PAY1	RTSQ8PAY1 RTSQ12PAY1	BTSQ20PY1	250 - 650

* The RTSQ10PA, RTSQ14PA, or RTSQ16PA unit cannot be used as a configuration unit of the multi outdoor unit system.

* The BHFP30AC56 outdoor unit multi connection piping kit (sold separately) is required for the piping connections of two outdoor units.

Note

- Install the function unit on the right-hand side of the outdoor unit. If the order of arrangement differs, the shape of the provided piping will not be compatible, in which case a substitute connection pipe will be required on site.

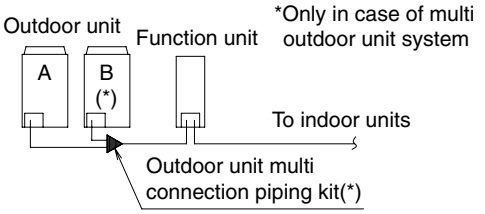

- If the total capacity of the connected indoor units exceeds the capacity of the outdoor unit, cooling and heating performance may drop when running the indoor units. See the capacity table in the Engineering Data Book for details.

2-5 Standard supplied accessories

Confirm the following accessories are included. The storage location of the accessories is shown in figure 1.

< Accessories included in outdoor unit >

Name	Clamp			Manuals, etc.
	(1)	(2)	(3)	
Quantity	11 pcs.	2 pcs.	1 pc.	1 pc. about each item
Shape	(Small)		(Large)	• Operation manual • Installation manual • "REQUEST FOR THE INDICATION" label (Installation records) • Refrigerant charge label • Declaration of conformity

Name	Gas side accessory pipe				
	(1)	(2)	(3)	(4)	
Quantity 8 type	1 pc.	1 pc.	1 pc.	2 pcs.	
Quantity 10 type					2 pcs.
Quantity 12 type			2 pcs.		
Quantity 14 · 16 type			3 pcs.	2 pcs.	
Shape				ϕ25.4	ϕ22.2

Name	Liquid side accessory pipe				Equalizer side accessory pipe	
	(1)	(2)	(3)		(1)	(2)
Quantity 8 type	1 pc.	1 pc.	2 pcs.		1 pc.	
Quantity 10 type				2 pcs.		
Quantity 12 type					1 pc.	2 pcs.
Quantity 14 · 16 type			2 pcs.			
Shape			ϕ12.7	ϕ9.5		

< Accessories included in function unit >

Name	Gas side accessory pipe(5)	Liquid side accessory pipe(4)
Quantity	2 pcs.	2 pcs.
Shape	ϕ25.4	ϕ12.7

(Refer to figure 1)

1. Clamps, Manuals, etc.
2. Accessory pipes

Note

- Accessories are divided separately for the outdoor unit and function unit. Check the accessories for both units.
- Do not throw away any of the accessories until installation is complete. They are needed for installation work.
  Request the user to keep the explanation documents after the installation work is completed.

2-6 Option accessory

To install the outdoor units, the following optional parts are also required. To select an optimum kit, refer to "**6. REFRIGERANT PIPING**".

- **Refrigerant branching kit**

REFNET header	KHRP26M22H	KHRP26M33H	KHRP26M72H
REFNET joint	KHRP26A22T	KHRP26A33T	KHRP26A72T

- **Outdoor unit connection piping kit**

Kit name	BHFP30A56

- **Pipe size reducer**

for REFNET header	KHRP26M73HP

Note

- Make sure that any separately purchased accessories are designed for use with R410A.
- The outdoor unit multi connection piping kit is required for the multi outdoor unit system only.

3. SELECTION OF LOCATION

Select a location for installation that meets the following conditions and get the customer's permission.

(1) There is no danger of fire due to leakage of inflammable gas.

(2) Select the location of the unit in such a way that neither the discharged air nor the sound generated by the unit disturb anyone.

(3) The foundation is strong enough to support the weight of the unit and the floor is flat to prevent vibration and noise generation.

(4) The piping length between the outdoor unit and the indoor unit may not exceed the allowable piping length.
(Refer to "**6. REFRIGERANT PIPING**")

(5) Locations where the unit's suction vent and outlet vent do not generally face the wind.
Wind blowing directly into the suction or outlet vents will interfere with the unit's operation.
If necessary, install some kind of obstruction to block the wind.

(6) The space around the unit is adequate for servicing and the minimum space for air inlet and air outlet is available.
(See the "**Installation Space Examples**" for the minimum space requirements.)

Installation Space Examples

- The installation space requirement shown in figure 2 is a reference for cooling operation when the outdoor temperature is 35°C. If the design outdoor temperature exceeds 35°C or the heat load exceeds maximum capacity in all the outdoor unit, take an even large space on the intake shown in figure 2.
- During installation, install the units using the most appropriate of the patterns shown in figure 2 for the location in question, taking into consideration human traffic and wind.
  If the number of units installed is more than that shown in the pattern in figure 2, install the units so there are no short circuits.
- As regards space in front of the unit, consider the space needed for the local refrigerant piping when installing the units.
- If a snowbreak hood (sold separately) is mounted, secure the required space of installation including the outer dimensions of the product and snowbreak hood.
- If the work conditions in figure 2 do not apply, contact your dealer or Daikin directly.

(Refer to figure 2)

1. In case of single outdoor unit system
2. In case of multi outdoor unit system
3. Pattern 1
4. Pattern 2
5. Pattern 3
6. Front side
7. No limit to wall height
8. Service space of front side
9. Service space of suction side

For Patterns 1 and 2 in figure 2 :

- Wall height for front side – no higher than 1500 mm.
- Wall height on the suction side – no higher than 500 mm.
- Wall height for sides – no limit.

If the height is exceeded the above, calculate h1 and h2 shown in the figure below, and add h2/2 to the service space of front side and h1/2 to the service space of suction side.

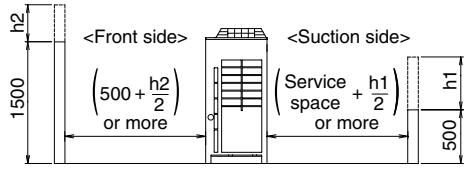

Note

(1) An inverter air conditioner may cause electronic noise generated from AM broadcasting. Examine where to install the main air conditioner and electric wires, keeping proper distances away from stereo equipment, personal computers, etc. Particularly for locations with weak reception, ensure there is a distance of at least 3 meters for indoor remote controllers, place power wiring and transmission wiring in conduits, and ground the conduits.

(Refer to figure 3)

1. Indoor unit
2. Branch switch, overcurrent breaker
3. Remote controller
4. Personal computer or radio
5. Air outlet
6. Rear side suction grille

(2) When installing in a locations where there is heavy snowfall, implement the following snow measures.

- Install the outdoor unit and function unit on a mount (procured locally) so that they may not be buried or covered with snowfall while the bottom frame will be 200 to 300 mm higher than the surface of the deposited snow.
- Mount the snowbreak hood (sold separately) and dismount the rear suction grille (see fig. 3).

(3) When mounting the snowbreak hood (sold separately) to the air inlet, make sure that the air outlet of the snow protection food will be located right angles to the winter wind or in the leeward direction.

(4) If the outdoor temperature of the place of installation is low in winter and defrost water discharged from the system freezes while the system is in defrost operation in heating mode, provide a sufficient space between the bottom frame of the outdoor unit and the foundation side. (A space of 500 to 1000 mm is recommended.)

(5) If condensate may drip on downstairs (or walkway) depending on the floor condition, take a measure such as the installation of drain pan (field supply).

(6) The refrigerant R410A itself is nontoxic, nonflammable and is safe. If the refrigerant should leak however, its concentration may exceed the allowable limit depending on room size. Due to this it could be necessary to take measures against leakage. See "**12. CAUTION FOR REFRIGERANT LEAKS**" for details.

4. INSPECTING AND HANDLING THE UNIT

- At delivery, the package should be checked and any damage should be reported immediately to the carrier claims agent.
- When handling the unit, take into account the following:

(1) Fragile, handle the unit with care.

Keep the unit upright in order to avoid compressor damage.

(2) Decide on the transportation route.

(3) If hanging the unit, keep the following points in mind and hang the unit following the procedure shown in figure 4.

- Use a sling sufficiently strong to hold the mass of the unit.
- Use 2 sling of at least 8m long.
- Place extra cloth or boards in the locations where the casing comes in contact with the sling to prevent damage.
- Hoist the unit making sure it is being lifted at its center of gravity.

In the case of transporting the outdoor unit by forklift, insert the fork into the opening (large) under the bottom of the outdoor unit.
(Refer to figure 5)
The function unit is not provided with any opening for fork insertion.

Note

- Apply a filler cloth on a fork to prevent coating of the bottom frame from coming off and rust from occurring when bringing the unit using a forklift.

(4) After the outdoor unit is installed, remove the transportation bracket (yellow) by pushing the hook mounted to the opening (large) of the outdoor unit. **(Refer to figure 5)**

(Refer to figure 4)

1. Slinging procedure for outdoor unit
2. Slinging procedure for function unit
3. Sling
4. Patch plate or path cloth
5. Opening (large)
6. Opening (small)

(Refer to figure 5)

1. Fork insertion place (outdoor unit only)
2. Fork
3. Opening (large)
4. Transportation bracket (yellow)
5. Hook of transportation bracket

5. PLACING THE UNIT

- Make sure the unit is installed level on a sufficiently strong base to prevent vibration and noise. **(Refer to figure 6 and 7)**
- The base should support the unit with the extent larger than hatched area in figure 6 and 7.
  If protective rubber is to be attached, attach it to the whole face of the base.
- The height of the base should be at least 150mm from the floor.
- Secure the unit to its base using foundation bolts. (Use four commercially available M12-type foundation bolts, nuts, and washers.)
- The foundation bolts should be inserted 20 mm.



(Refer to figure 6)

1. Basic shape of outdoor unit and position of foundation bolt
2. Center of product
3. Product depth
4. Basic size
5. Four, 15 × 22.5 eclipse hole (foundation bolt hole)

Model	A	B
RTSQ8 · 10 · 12 PA Type	930	792
RTSQ14 · 16 PA Type	1240	1102

(Refer to figure 7)

1. Basic shape of function unit and position of foundation bolt

Note

- When installing on a roof, make sure the roof floor is strong enough and be sure to water-proof all work.
- Make sure the area around the machine drains properly by setting up drainage grooves around the foundation.
  Drain water is sometimes discharged from the outdoor unit when it is running.

6. REFRIGERANT PIPING

Note

- All field piping must be installed by a licensed refrigeration technician and must comply with relevant local and national regulations.
- After piping work is complete, do not open the shutoff valve under any circumstances until "**7. FIELD WIRING**" and "**8. TESTS AND INSULATION WORK**" are complete.
- Do not use flux when brazing the refrigerant piping. Use the phosphor copper brazing filler metal (BCuP-2 : JIS Z 3264, B-Cu93P-710/795 : ISO 3677) which does not require flux.
  (Flux has extremely harmful influence on refrigerant piping systems. For instance, if the chlorine based flux is used, it will cause pipe corrosion or, in particular, if the flux contains fluorine, it will damage the refrigerant oil.)

6-1 Selection of piping material and Refrigerant branching kit

- Use only pipes which are clean inside and outside and which do not accumulate harmful sulfur, oxidants, dirt, cutting oils, moisture, or other contamination. (Foreign materials inside pipes including oils for fabrication must be 30mg/10m or less.)
- Use the following items for the refrigerant piping.
  Material :Jointless phosphor-deoxidized copper pipe
  Size :See "**6-5 Example of connection**" to determine the correct size.
  Thickness :Select a thickness for the refrigerant piping which complies with national and local laws.
  For R410A, the design pressure is 4.0 MPa (40-bar).
  The minimum thickness of piping according to Japan's High-Pressure Gas Safety Law (as of January 2003) is shown below.
  Temper grade (O type, 1/2H type) in the table indicate the material types specified in JIS H 3300.

(unit : mm)

Temper grade	O type			
outer diameter	ϕ6.4	ϕ9.5	ϕ12.7	ϕ15.9
smallest thickness	0.80	0.80	0.80	0.99

(unit : mm)

Temper grade	1/2H type							
outer diameter	ϕ19.1	ϕ22.2	ϕ25.4	ϕ28.6	ϕ31.8	ϕ34.9	ϕ38.1	ϕ41.3
smallest thickness	0.80	0.80	0.88	0.99	1.10	1.21	1.32	1.43

- For piping work, follow the maximum tolerated length, difference in height, and length after a branch indicated in the "**6-5 Example of connection**".
- Outdoor unit multi connection piping kit and refrigerant branching kit (sold separately) are needed for connection of piping between outdoor units (in case of multi system) and piping branches.
  Use only separately sold items selected specifically according to the outdoor unit multi connection piping kit, the refrigerant branching kit selection in the "**6-5 Example of connection**".

6-2 Protection against contamination when installing pipes

Protect the piping to prevent moisture, dirt, dust, etc. from entering the piping.

Place	Installation period	Protection method
Outdoor	More than a month	Pinch the pipe
	Less than a month	Pinch or tape the pipe
Indoor	Regardless of the period	

Note

Exercise special caution to prevent dirt or dust when passing piping through holes in walls and when passing pipe edges to the exterior.

6-3 Pipe connection

- Be sure to perform nitrogen permutation or nitrogen blow when brazing. **(Refer to figure 8)**
  Brazing without performing nitrogen permutation or nitrogen blow into the piping will create large quantities of oxidized film on the inside of the pipes, adversely affecting valves and compressors in the refrigerating system and preventing normal operation.

(Refer to figure 8)

1. Refrigerant pipe
2. Location to be brazed
3. Nitrogen
4. Taping
5. Handy valve
6. Regulator

- The pressure regulator for the nitrogen released when doing the brazing should be set to about 0.02 MPa (0.2kg/cm^2 : Enough to feel a slight breeze on your cheek).

Prohibition

Do not use anti-oxidants when brazing the pipe joints.
Residue can clog pipes and break equipment.

6-4 Connecting the refrigerant piping

1. Direction to bring out the pipes

The pipes (liquid, gas, and equalizer pipes) between outdoor units in the case of the outdoor unit multi system, the pipes (liquid and gas pipes) between the outdoor and function units, and the connecting pipes (liquid and gas pipes) between the function and indoor units can be taken out from the front or lower sides of the units as shown in fig. 9.

When passing out through the bottom, use the knock hole in the bottom frame.

(Refer to figure 9)

1. Outdoor unit
2. Function unit
3. Front connections
4. Bottom connections
5. To indoor unit

Precautions when knocking out knock holes

- Open knock hole in the base frame by drilling the concave around it with a 6mm bit. **(Refer to figure 10)**

(Refer to figure 10)

1. For outdoor unit
2. For functional unit
3. Knock hole (large) for liquid and gas pipes
4. Drill (6 mm dia.)
5. Dent (four points)
6. Knock hole (large and small) for liquid and gas pipes on outdoor unit side
7. Knock hole (large and small) for liquid and gas pipes for indoor unit side
8. Dent (two points)
9. Knock hole (small) for equalizer pipe (Only use in case of multi outdoor unit system)

- Be sure to avoid damaging the casing
- After knocking out the holes, we recommend you remove any burrs and paint them using the repair paint to prevent rusting.
- When passing electrical wiring through the knock holes, protect the wiring with a conduit or bushings, making sure not to damage the wiring.

2. Removing Pinch Piping

- When connecting refrigerant piping to an outdoor unit or function unit, remove the pinch piping using the procedure in the figure 11 or the figure 12.
- About handling of shutoff valves, refer to [Shutoff valve operation procedure] in "**9-1 Before working**".

Caution

After removing the gass, remove the pinch piping.
Any gas remaining inside may blow off the pinch piping when you dissolve the brazing, causing damage.

(Refer to figure 11)

1. Removal procedure for pinch piping of outdoor unit
2. Pinch pipe A
3. Pinch pipe B
4. Pinch pipe C (*)
5. Never remove the relay pipe.
6. Step 1: Check that the stop valve is closed.
7. Step 2: Connect the charge hose to the stop valve, and extract the gas in the pinch piping.
8. After the gas is extracted, cut the pinched piping off with a pipe cutter just above the marking.
9. Pinch pipe

(*) The pinch pipes to be removed varies with the system. Refer to the following table and remove the corresponding pinch pipes.

System type	Outdoor unit name	Pinch pipes to be removed
Single outdoor unit system	RTSQ10 · 14 · 16PAY1	Pinch pipes A and B
Multi outdoor unit system	RTSQ8 · 12PAY1	Pinch pipes A and B, C

Caution

Never remove the pinched piping by brazing.

- Wait until all oil is dripped out in case the recovery was not complete, and only then proceed with connection of the field piping.

Caution

Never remove the pinched piping by brazing.

Any gas or oil remaining inside the stop valve may blow off the pinched piping.

Failure to observe the instructions in procedure below properly may result in property damage or personal injury, which may be serious depending on the circumstances.

(Refer to figure 12)

1. Removal procedure for pinch piping of function unit
2. Pinch pipes (×4)
3. Step 1: Cut the port piping connected to the pinch piping with an appropriate tool, such as a pipe cutter. Then extract the gas in the pinch piping.
4. Step 2: After the gas is extracted, melt the blazing material with a burner and remove the pinch pipes.

3. Connecting refrigerant piping to outdoor units and function unit

- Figure 13 shows a connection example of refrigerant piping to the outdoor unit in the case of the single outdoor unit system.
  Figure 14 shows a connection example of refrigerant piping to the outdoor units in the case of the multi outdoor unit system.
  Figure 15 shows a connection example of refrigerant piping to the function unit.
- For the detailed connection method of the outdoor units in the case of the multi outdoor unit system, follow the instructions in "**4.** Piping Connections between Outdoor Units" and the installation manual provided with the outdoor unit multi connection piping kit (sold separately).

Note

- The equalizer piping connects the outdoor units in the case of the multi outdoor unit system. There are no connections to the function unit.
- The L-shaped joint (locally arranged) with a diameter of 19.1 mm is required to connect the refrigerant piping to the outdoor unit, gas pipe shutoff valve and gas side accessory pipe (2), and the connecting piping of the equalizer shutoff valve and equalizer side accessory pipe (2).
- The liquid pipe, gas pipe, equalizer pipe (for the multi outdoor unit system only), and some L-shaped joints to be connected to the provided piping should be procured locally.
- Make sure the onsite piping does not come into contact with other piping or the bottom frame or side panels of the unit.

(Refer to figure 13)

1. Bottom connections
2. Front connections
3. Gas pipe shutoff valve
4. Liquid pipe shutoff valve
5. Liquid side accessory pipe (1)
6. Liquid side accessory pipe (2)
7. Gas side accessory pipe (1)
8. Gas side accessory pipe (2)
9. Gas side accessory pipe (3) (*1)
10. L-shaped joint (procured locally)
11. Piping on liquid side (procured locally)
12. Piping on gas side (procured locally)
13. Blazing
14. To function unit

(Refer to figure 14)

1. Bottom connections
2. Front connections
3. Liquid pipe shutoff valve
4. Gas pipe shutoff valve
5. Equalizer shutoff valve
6. Liquid side accessory pipe (1)
7. Liquid side accessory pipe (2)
8. Gas side accessory pipe (1)
9. Gas side accessory pipe (2)
10. Gas side accessory pipe (3) (*2)
11. Equalizer side accessory pipe (1)
12. Equalizer side accessory pipe (2)
13. L-shaped joint (procured locally)
14. Blazing

(Refer to figure 15)

1. Bottom connections
2. Front connections
3. Liquid side accessory pipe (3)
4. Liquid side accessory pipe (4)
5. Gas side accessory pipe (3) (*3)
6. Gas side accessory pipe (3) (*3) (*4)
7. Gas side accessory pipe (4)
8. Gas side accessory pipe (5)
9. Piping on liquid side (procured locally)
10. Piping on gas side (procured locally)
11. Blazing
12. To outdoor unit
13. To indoor unit

(*1) RTSQ14PA and RTSQ16PA units only (procured locally for others)

(*2) RTSQ12PA unit only (procured locally for other)

(*3) RTSYQ14PA to RTSYQ20PA systems only (procured locally for others)

(*4) **<For RTSYQ14PA and RTSYQ16PA systems>**
Refer to figure 16 and the following table, and cut the gas side accessory pipe (3).

<RTSYQ20PA system>
Refer to the installation manual of the outdoor unit connection piping kit and cut the gas side accessory pipe (3).

(Refer to figure 16)

1. Gas side accessory pipe (3) (Indoor side)
2. Cut to 130 mm.
3. Gas side accessory pipe (3) (Outdoor side)
4. Cut to 73 mm.
5. Function unit
6. Outdoor unit
7. Connecting piping on gas side (procured locally)
8. To indoor units

System name	Required dimensions for gas side accessory pipe (3)	
	Outdoor side	Indoor side
RTSYQ14 · 16PA type	73mm	130mm

Note

- The dimensions shown in above table are required when installing the piping (procured locally) on the gas side of the outdoor unit in the position shown in figure 16.
  Refer to the table above and make necessary size adjustment if the working conditions of the on-site piping on the gas side differ.

4. Piping Connections between Outdoor Units (for Multi Outdoor Unit System Only)

- Observe the restrictions specified below to connect the outdoor units.
- The outdoor unit multi connection piping kit (sold separately) is required for the connection of the piping between the outdoor units. For the installation of the outdoor unit multi connection piping kit, refer to the installation manual provided with the kit. Unless the kit is installed properly, the outdoor units may malfunction or fail to operate.

(1) About outdoor unit multi connection piping kit

- Install the joint horizontally so that the attached warning label faces strait up, and the tilt is within ±15°.
  (Refer to figure 17-1)
  Do not install vertically. **(Refer to figure 17-2)**
- Maintain a straight portion of 500 mm or more until the split of the joint without wrapping any onsite piping around this area.
  Over 500 mm of straight area can be maintained by connecting at least 120 mm of onsite pipe (straight) to the joint.
  (Refer to figure 17-3)

(Refer to figure 17)

1. Warning label
2. Horizontal surface
3. ±15° or less
4. Ground
5. A-arrow view
6. B-arrow view
7. Onsite pipe (120mm length or more)
8. Straight part of 500mm or more

(2) Install the piping between the outdoor units horizontally or with a rising gradient toward outdoor unit A from outdoor unit B in order to prevent oil remaining in the piping.

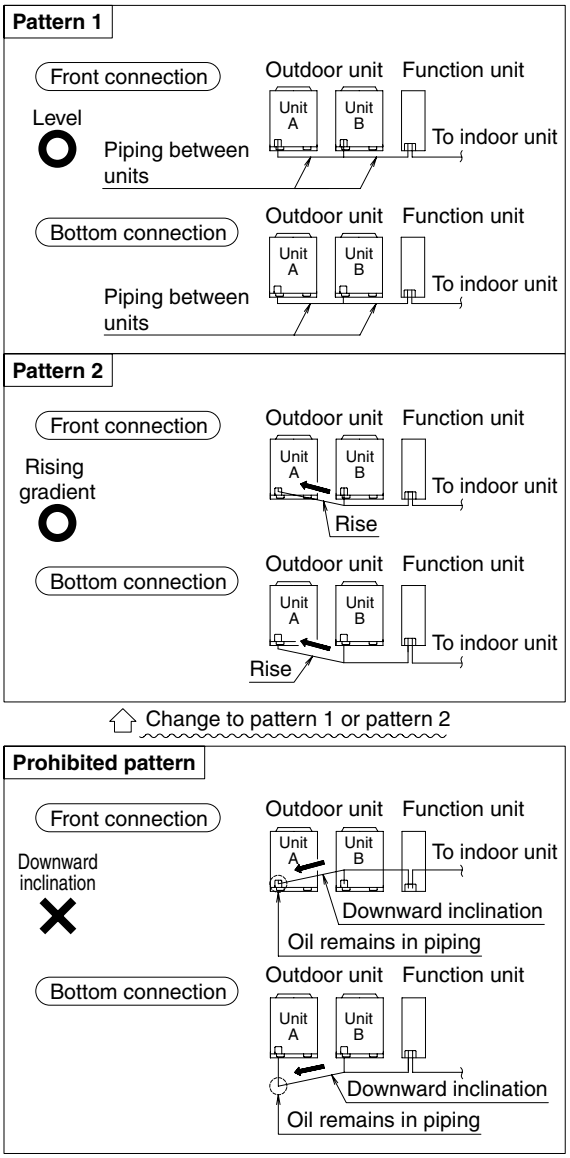

(3) To avoid the risk of oil detention in the stopping unit, always connect the shutoff valve and the piping between outdoor units as shown A or B in the figure below.

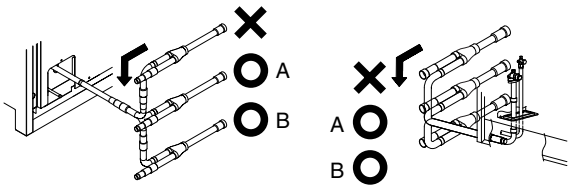

Front connection　　Bottom connection

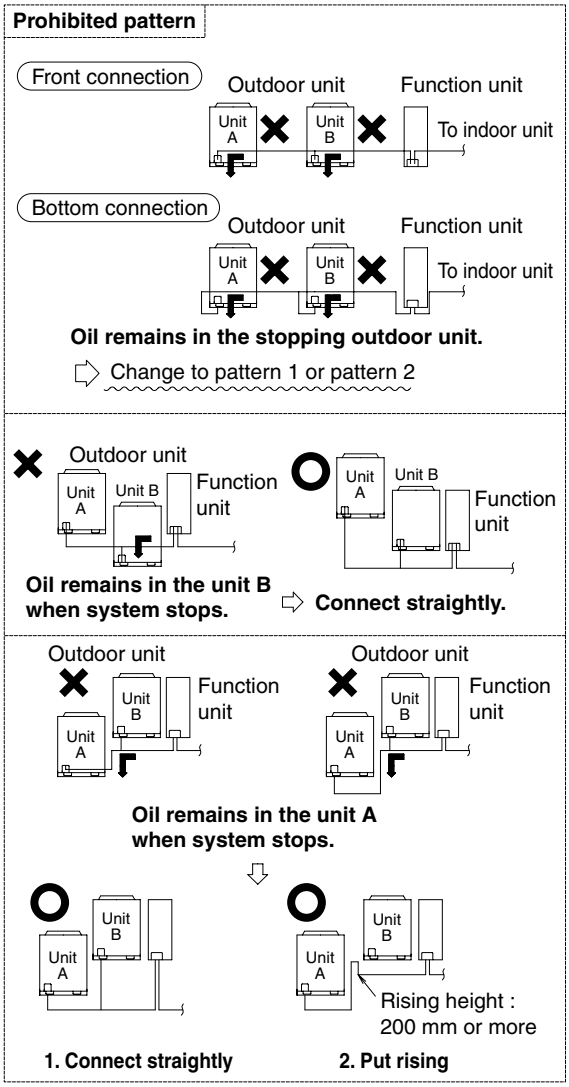

(4) If the piping length between the outdoor units exceeds 2 m, create a rise of 200 mm or more in the gas piping under a length of 2 m from the outdoor unit multi connection piping kit.

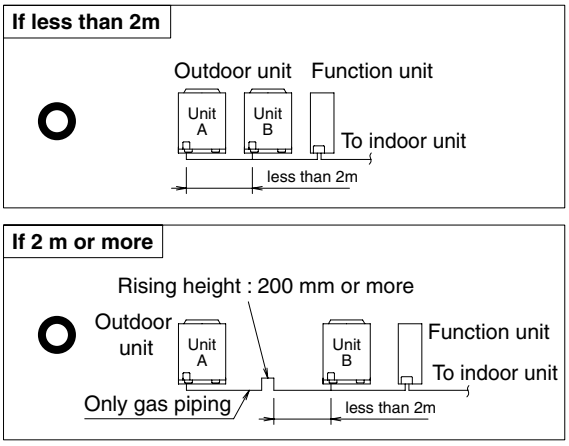

5. Branching the refrigerant piping

Heed the restrictions below when installing the refrigerant branching kit and read the installation instruction manual with the kit. (Improper installation could lead to malfunctioning or breakdown of the outdoor unit.)

<REFNET joint>

Install the REFNET joint so it splits horizontally or vertically.

(Refer to figure 18)

1. Horizontal
2. A-arrow view
3. Horizontal surface
4. ±30° or less
5. Vertical

<REFNET header>

Install the REFNET header so it splits horizontally.

(Refer to figure 19)

1. Horizontal surface
2. B-arrow view

Example of connection
(Connection of 8 indoor units)

(*1) "◀" Indicate the Outdoor unit multi connection piping kit.
(*2) In case of multi outdoor system, re-read "outdoor unit" to "Outdoor unit multi connection piping kit" as seen from the indoor unit.

	Branch with REFNET joint	Branch with REFNET joint and header	Branch with REFNET header
Single outdoor system	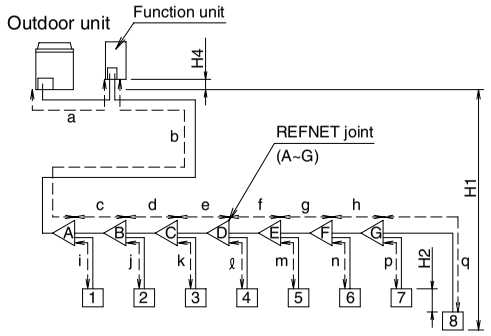 1~8 : Indoor unit	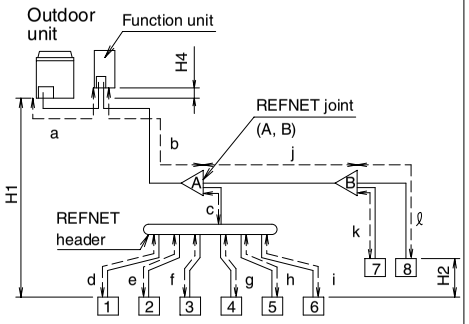 1~8 : Indoor unit	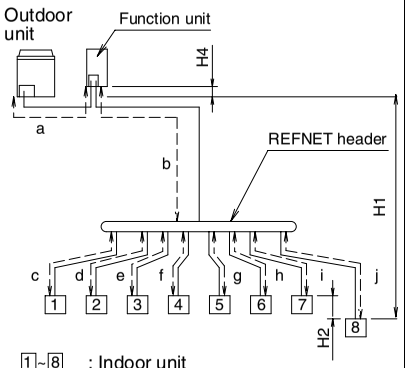 1~8 : Indoor unit
Multi outdoor system	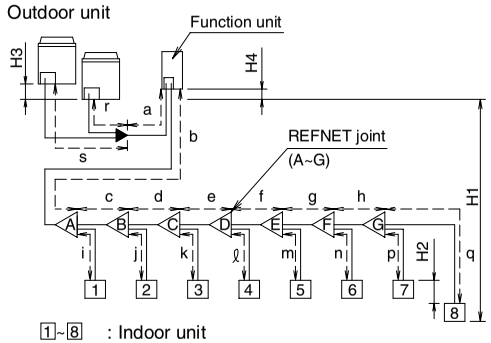 1~8 : Indoor unit	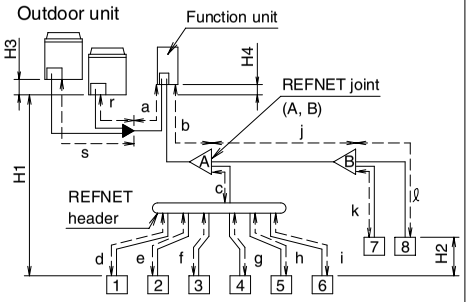 1~8 : Indoor unit	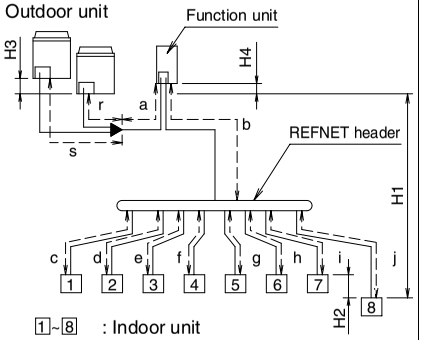 1~8 : Indoor unit

Maximum allowable length	Between outdoor unit (*2) and indoor unit	Actual pipe length	Pipe length between outdoor unit (*2) and indoor unit ≤ 165m		
			Example 8 : a + b + c + d + e + f + g +h +q ≤ 165m	Example 6 : a + b + c + i ≤ 165m, 8 : a + b + j +ℓ ≤ 165m	Example 8 : a + b + j ≤ 165m
		Equivalent length	Equvalent pipe length between outdoor unit (*2) and indoor unit ≤ 190m (Note 1) (Assume eqivalent pipe length of REFNET joint to be 0.5m, that of REFNET header to be 1m, that of function unit to be 6m for calculation purposes)		
		Total extention length	Total piping length from outdoor unit (*2) to all indoor unit ≤ 500m		
	Between outdoor unit and function unit Between outdoor unit and outdoor unit multi connection piping kit	Actual and Equivalent pipe length	Actual pipe length from outdoor unit to function unit, that from first outdoor unit multi connection piping kit to outdoor unit ≤ 10m Equivalent pipe length from outdoor unit to function unit, that from first outdoor unit multi connection piping kit to outdoor unit ≤ 13m		
Allowable height difference	Between outdoor and indoor units	Difference in height	Difference in height between outdoor unit and indoor unit (H1) ≤ 50m (Max 40m if the outdoor unit is below)		
	Between indoor and indoor units	Difference in height	Difference in height between indoor units (H2) ≤ 15m		
	Between outdoor and outdoor units	Difference in height	Difference in height between outdoor units (H3) ≤ 5m		
	Between outdoor unit and function unit	Difference in height	Difference in height between outodoor unit and function unit (H4) ≤ 1m		
Allowable length after the branch		Actual pipe length	Actual pipe length from first refrigerant branch kit (either REFNET joint or REFNET header) to indoor unit ≤ 40m (Note 2)		
			Example 8 : c + d + e + f + g + h + q ≤ 40m	Example 6 : c + i ≤ 40m, 8 : j + ℓ ≤ 40m	Example 8 : j ≤ 40m

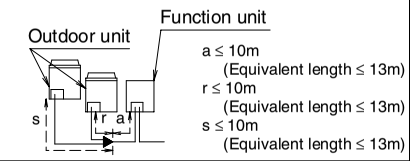

Outdoor unit multi connection piping kit and Refrigerant branch kit selection

- Refrigerant branch kits can only be used with R410A.
- When multi outdoor system are installed, be sure to use the special separately sold Outdoor unit multi connection piping kit. (BHFP30A56).
  (For how to select the proper kit, follow the table at right.)

How to select the REFNET joint

- When using REFNET joint at the first branch counted from the outdoor unit side, choose from the following table in accordance with the outdoor system capacity type. (Example : REFNET joint A)

Outdoor system capacity type	Refrigerant branch kit name
10HP type	KHRP26A33T
14~20HP type	KHRP26A72T

- Choose the REFNET joints other than the first branch from the following table in accordance with the total capacity index of all the indoor units connected below the REFNET joint.

Indoor unit total capacity index	Refrigerant branch kit name
x < 200	KHRP26A22T
200 ≤ x < 290	KHRP26A33T
290 ≤ x < 640	KHRP26A72T

How to select the REFNET header

- Choose from the following table in accordance with the total capacity index of all the indoor units connected below the REFNET header.
- 250 type indoor unit can not be connected below the REFNET header.

Indoor unit total capacity index	Refrigerant branch kit name
x < 200	KHRP26M22H or KHRP26A33H
200 ≤ x < 290	KHRP26M33H
290 ≤ x < 640	KHRP26M72H
640 ≤ x	KHRP26M73H + KHRP26M73HP

How to select the outdoor unit multi connection piping kit
(This is required when the system is multi outdoor unit system.)

- Choose from the following table in accordance with the number of outdoor units.

Number of outdoor unit	Connecting piping kit name
2 units	BHFP30AP56

Example for indoor units connected downstream	Example REFNET joint C : Indoor units 3+4+5+6+7+8	Example REFNET joint B : Indoor units 7 + 8 Example REFNET header : Indoor units 1+2+3+4+5+6	Example REFNET header : Indoor units 1+2+3+4+5+6+7+8

Pipe size selection

⚠ The thickness of the pipes in the table shows the requirements of Japanease High Pressure Gas Controll low. (As of Jan. 2003)
The thickness and material shall be selected in accordance with local code.

<In case of single outdoor unit system>

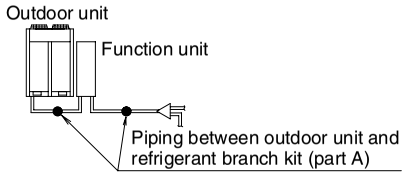

<In case of multi outdoor unit system>

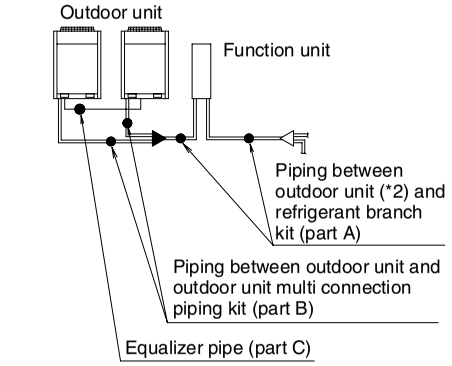
Outdoor unit
Function unit
Piping between outdoor unit (*2) and refrigerant branch kit (part A)
Piping between outdoor unit and outdoor unit multi connection piping kit (part B)
Equalizer pipe (part C)

Piping between outdoor unit (*2) and refrigerant branch kit (part A)

- Choose from the following table in accordance with the outdoor unit system capacity type.

(unit : mm)

Outdoor system capacity type	Piping size (O. D.)	
	Gas pipe	Liquid pipe
10HP type	ϕ22.2	ϕ9.5
14,16HP type	ϕ28.6	ϕ12.7
20HP type		ϕ15.9

Piping between outdoor unit multi connection piping kit and outdoor unit (part B)

- Choose from the following table in accordance with the capacity type of the outdoor unit connected.

(unit : mm)

Outdoor unit capacity type	Piping size (O. D.)	
	Gas pipe	Liquid pipe
RTSQ8 type	ϕ22.2	ϕ9.5
RTSQ12 type	ϕ28.6	ϕ12.7

Piping between refrigerant branch kits

- Choose from the following table in accordance with the total capacity type of all the indoor units connected downstream.
- Do not let the connection piping exceed the main refrigerant piping size (Part A). If the piping size selected from the following table exceeds the piping size of part A, decide the piping size in either of the following methods.
  (1) Reduce the size of the connection piping to the piping size of part A.
  (2) Replace the piping of part A with piping that is a size larger (see the table in Note 1) so that it will be the same as the size of the connection piping.

(unit : mm)

Indoor capacity index	Piping size (O. D.)	
	Gas pipe	Liquid pipe
x < 150	ϕ15.9	ϕ9.5
150 ≤ x < 200	ϕ19.1	
200 ≤ x < 290	ϕ22.2	
290 ≤ x < 420	ϕ28.6	ϕ12.7
420 ≤ x < 640		ϕ15.9

Piping between refrigerant branch kit, and indoor unit

- Match to the size of the connection piping on the indoor unit.

(unit : mm)

Indoor unit capacity type	Piping size (O. D.)	
	Gas pipe	Liquid pipe
20 · 25 · 32 · 40 · 50 type	ϕ12.7	ϕ6.4
63 · 80 · 100 · 125 type	ϕ15.9	ϕ9.5
200 type	ϕ19.1	
250 type	ϕ22.2	

Equalizer pipe (part D) (multi outdoor unit system only)

(unit : mm)

Piping size (O. D.)	ϕ19.1

Temper grade and wall thickness for pipes

(Temper grade, O type and 1/2H type indicate the material type specified in JIS H 3300.)

Copper tube O. D.	ϕ6.4	ϕ9.5	ϕ12.7	ϕ15.9	ϕ19.1	ϕ22.2	ϕ25.4	ϕ28.6	ϕ31.8	ϕ34.9	ϕ38.1	ϕ41.3
Temper grade	O type				1/2H type							
Wall thickness (Min. requirement)	0.80	0.80	0.80	0.99	0.80	0.80	0.88	0.99	1.10	1.21	1.32	1.43

How to calculate the additional refrigerant to be charged

Additional refrigerant to be charged : R(kg)
(R should be rounded off in units of 0.1 kg.)

$$R = \left(\begin{array}{l} (\text{Total length(m) of liquid piping size at } \phi 22.2) \times 0.37 + (\text{Total length(m) of liquid piping size at } \phi 19.1) \times 0.26 \\ + (\text{Total length(m) of liquid piping size at } \phi 15.9) \times 0.18 + (\text{Total length(m) of liquid piping size at } \phi 12.7) \times 0.12 \\ + (\text{Total length(m) of liquid piping size at } \phi 9.5) \times 0.059 + (\text{Total length(m) of liquid piping size at } \phi 6.4) \times 0.022 \end{array} \right) + \alpha$$

FOR THE SYSTEM	
SYSTEM NAME	THE AMOUNT OF REFRIGERANT
RTSYQ10PAY1	—
RTSYQ14PAY1	1.3kg
RTSYQ16PAY1	2.3kg
RTSYQ20PAY1	—

Example for refrigerant branch using REFNET joint and REFNET header for the systems and each pipe length as shown below.

System : RTSYQ20PAY1
Independent outdoor unit : RTSQ8PAY1, RTSQ12PAY1
Function unit : BTSQ20PY1

a : ϕ15.9 × 10m	e : ϕ6.4 × 10m	i : ϕ6.4 × 10m	r : ϕ12.7 × 5m
b : ϕ15.9 × 30m	f : ϕ6.4 × 20m	j : ϕ9.5 × 20m	s : ϕ9.5 × 10m
c : ϕ12.7 × 20m	g : ϕ6.4 × 20m	k : ϕ9.5 × 10m	
d : ϕ6.4 × 10m	h : ϕ6.4 × 10m	ℓ : ϕ9.5 × 10m	

$$R = \underset{\text{a, b}}{40 \times 0.18} + \underset{\text{c, r}}{25 \times 0.12} + \underset{\text{j, k, ℓ, s}}{50 \times 0.059} + \underset{\text{d~i}}{80 \times 0.022} = 14.91 \Longrightarrow 14.9\text{kg}$$

Round off in units of 0.1 kg.

Note 1.
When the equivalent pipe length between outdor (*2) and indoor units is 90m or more, the size of main pipes (figure on right) must be increased according to the right table.

System	Gas	Liquid
RTSYQ10PA type	ϕ22.2 → ϕ25.4 (*)	ϕ9.5 → ϕ12.7
RTSYQ14PA type	Not Increased	ϕ12.7 → ϕ15.9
RTSYQ16PA type	ϕ28.6 → ϕ31.8 (*)	
RTSYQ20PA type		ϕ15.9 → ϕ19.1

(*) If available on the site, use this size.
Otherwise, it can not be increased.

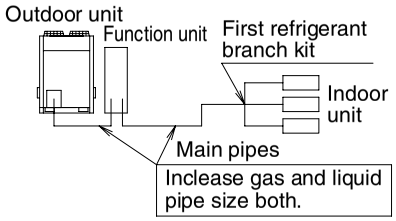

In case of single outdoor unit system

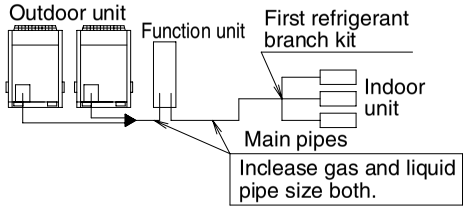

In case of multi outdoor unit system

Note 2. Allowable length after the first refrigerant branch kit to indoor units is 40m or less, however it can be extended up to 90m if all the following conditions are satisfied.

Required Conditions	Example Drawings (In case of "**Branch with REFNET joint**")	
1. It is necessary to increase the pipe size between the first branch kit and the final branch kit. (Reducers must be procured on site) However, the pipes that are same pipe size with main pipe must not be increased.	[8] c+d+e+f+g+h+q≤ 90 m increase the pipe size of c, d, e, f, g, h	Increase the pipe size as follows ϕ 9.5 → ϕ12.7 ϕ15.9 → ϕ19.1 ϕ22.2 → ϕ25.4* ϕ34.9 → ϕ38.1* ϕ12.7 → ϕ15.9 ϕ19.1 → ϕ22.2 ϕ28.6 → ϕ31.8*
2. For calculation of Total extension length, the actual length of above pipes must be doubled. (except main pipe and the pipes that are not increased)	a+b+c×2+d×2+e×2+f×2+g×2 +h×2+i+j+k+ℓ+m+n+p+q≤ 500 m	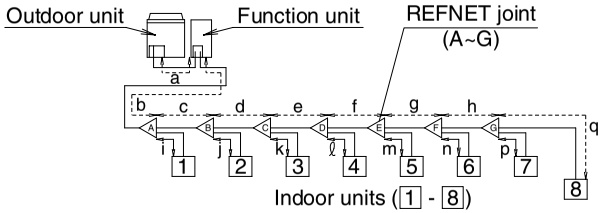
3. Indoor unit to the nearest branch kit ≤ 40 m	i, j..... p, q ≤ 40 m	
4. The difference between [Outdoor unit to the farthest indoor unit] and [Outdoor unit to the nearest indoor unit] ≤ 40 m	The farthest indoor unit [8] The nearest indoor unit [1] (a+b+c+d+e+f+g+h+q)-(a+b+i)≤ 40 m	

*If available on the site, use this size. Otherwise it can not be increased.

7. FIELD WIRING

Caution

- All field wiring and components must be installed by a licensed electrician and must comply with relevant local and national regulations.
- Be sure to use a dedicated power circuit. Never use a power supply shared by another appliance.
- Never install a phase advancing capacitor. As this unit is equipped with an inverter, installing a phase advancing capacitor will not only deteriorate power factor improvement effect, but also may cause capacitor abnormal heating accident due to high-frequency waves.
- Only proceed with wiring work after blocking off all power.
- Always ground wires in accordance with relevant local and national regulations.
- This machine includes an inverter device. Connect earth and leave charge to eliminate the impact on other devices by reducing noise generated from the inverter device and to prevent leaked current from being charged in the outer hull of the product.
- Do not connect the ground wire to gas pipes, sewage pipes, lightning rods, or telephone ground wires.
  Gas pipes : can explode or catch fire if there is a gas leak.
  Sewage pipes : no grounding effect is possible if hard plastic piping is used.
  Telephone ground wires and lightning rods : dangerous when struck by lightning due to abnormal rise in electrical potential in the grounding.
- Be sure to install an earth leakage circuit breaker.
  This unit uses an inverter, so install the earth leakage circuit breaker that be capable of handling high harmonics in order to prevent malfunctioning of the earth leakage circuit breaker itself.
- Earth leakage circuit breaker which are especially for protecting ground-faults should be used in conjunction with main switch or fuse for use with wiring. Make sure that the capacity is the same as or more than the rated capacity of the fuse or breaker in that case.

Note

- Electrical wiring must be done in accordance with the wiring diagrams and the description herein.
- Do not operate until refrigerant piping work is completed.
  (If operated before complete the piping work, the compressor may be broken down.)
- This product have reversed phase protection detector that only works when the power is turned on. If there exists black out or the power goes on and off which the product is operating, attach a reversed phase protection circuit locally. Running the product in reversed phase may break the compressor and other parts.
- Attach the power wire securely. Introducing power with a missing N-phase or with a mistaken N-phase will break the unit.
- Make sure the electrical unbalance ratio is no greater than 2%. If it is larger than this, the unit's lifespan will be reduced.
  If the ratio exceeds 4%, the unit will shut down and an malfunction code will be displayed on the indoor remote controller.
- Never remove thermistor, sensor or etc. when connecting power wiring and transmission wiring.
  If operated with thermistor, sensor or etc. removed, the compressor may be broken down.
- Never connect the power supply in reversed phase.
  The unit can not operate normally in reversed phase.
  If you connect in reversed phase, replace two of the three phases.
- Connect the wire securely using designated wire and fix it with attached clamp without applying external pressure on the terminal parts (terminal for power wiring, terminal for transmission wiring and earth terminal).

7-1 Power circuit, safety device and cable requirements

- A power circuit (see the following table) must be provided for connection of the unit. This circuit must be protected with the required safety devices, i.e. a main switch, a slow blow fuse on each phase and an earth leakage circuit breaker.
- When using residual current operated circuit breakers, be sure to use a high-speed type (0.1 second or less) 200mA rated residual operating current.
- Specifications for local wiring are in compliance with IEC60245.
- Select the power supply cable type and size in accordance with relevant local and national regulations.
- Use copper conductors only.
- Use insulated wire for the power cord.
- Use wire type H05VV when protected pipes are used.
  Use wire type H07RN-F when protected pipes are not used.

	Phase and frequency	Voltage	Minimum circuit amp.	Recommended fuses
<for individual unit>				
RTSQ8PAY1	ϕ 3, 50Hz	380-415V	18.5A	25A
RTSQ10PAY1	ϕ 3, 50Hz	380-415V	21.6A	25A
RTSQ12PAY1	ϕ 3, 50Hz	380-415V	22.7A	25A
RTSQ14PAY1	ϕ 3, 50Hz	380-415V	31.5A	35A
RTSQ16PAY1	ϕ 3, 50Hz	380-415V	32.5A	40A
BTSQ20PY1	ϕ 3, 50Hz	380-415V	15.2A	20A
<for system>				
RTSYQ10PAY1	ϕ 3, 50Hz	380-415V	21.6A	25A
RTSYQ14PAY1	ϕ 3, 50Hz	380-415V	31.5A	35A
RTSYQ16PAY1	ϕ 3, 50Hz	380-415V	32.5A	40A
RTSYQ20PAY1	ϕ 3, 50Hz	380-415V	41.2A	50A

7-2 Wiring Connection Example for Whole System

(Refer to figure 20)

1. Power supply
2. Main switch
3. Earth leakage circuit breaker
4. Fuse
5. Outdoor unit
6. Function unit
7. Remote controller
8. Indoor unit

Note

- All field wiring is to be procured on site.
- Make sure the weak electric wiring (i.e. for the remote controller, between units, etc.) and the power wiring do not pass near each other, keeping them at least 50 mm apart.
  Proximity may cause electrical interference, malfunctions, and breakage.
- Transmission wiring should be secured as described in "**7-4 Transmission Wiring Connection Procedure**".
- Be sure to connect the power wiring to the power wiring terminal block and secure it as described in "**7-5 Power Wiring Connection Procedure**".
- Secure wiring with clamp such as insulation lock ties to avoid contact with piping.
- Shape the wires to prevent the structure such as the EL. COMPO. BOX lid deforming. And close the cover firmly.

7-3 Leading wire Procedure

- The power wiring and ground wiring are passed out from the power wiring hole on the sides, the front (knock hole) or the bottom frame (knock hole) .
- The transmission wiring is passed out from the wiring hole (knock hole) on the front of the unit or from a piping hole.

(Refer to figure 21)

1. Outdoor unit
2. Function unit
3. Electric wiring diagram (Rear side of EL.COMPO.BOX lid)
4. Power wring and ground wiring
5. Conduit
6. Piping outlet
7. Transmission wiring
8. To Indoor unit and function unit
9. Wiring inlet (front)
10. Through cover
11. Cut off the hatching parts.
12. Power wiring and ground wiring
13. Inside conduit
14. To outdoor unit
15. Knock hole
16. For transmission wring
17. For power wiring and ground wiring
18. Burr

Note

- Open the knock holes with a hammer or the like.
- After knocking out the holes, we recommend you remove any burrs and paint them using the repair paint to prevent rusting. **(Refer to figure 21)**
- When passing wiring through the knock holes, remove burrs around the knock holes and protect the wiring with conduit or protective tape.
- If small animals might enter the unit, block off any gaps (hatching parts in figure 21) with material (field supply).

7-4 Transmission Wiring Connection Procedure

- Referring to figure 22 connect the transmission wiring between outdoor unit and function unit, outdoor unit and outdoor unit of same system (Only in case multi outdoor unit system), outdoor unit and indoor unit, outdoor unit and outdoor unit of other system.

(Refer to figure 22)

1. For single outdoor unit system
2. For multi outdoor unit system
3. Outdoor unit
4. Function unit
5. Master outdoor unit A (*)
6. Slave outdoor unit B (*)
7. To outdoor unit in other refrigerant system
8. Indoor unit
9. Use 2-core cable (with no polarity).
10. Never connect power wiring.

(*) In the case of the multi outdoor unit system, the outdoor unit connecting the transmission wiring to the indoor unit (outdoor unit A in figure 22) is the master and the other outdoor unit is the slave. Operate the control PCB (A1P) of the master for commissioning at the time of installation or local settings at the time of servicing.

Note

- Do not connect the power wiring to terminals for the transmission wiring. Doing so would destroy the entire system.
- When connecting wires to the terminal block on the PC-board, too much heat or tightening could damage the PC-board. Attach with care.
  See the table below for the tightening torque of the transmission wiring terminals.

Screw size	Tightening torque (N · m)
M3.5 (A1P)	0.80 - 0.96

- All transmission wiring should use sheathed vinyl cord 0.75-1.25 mm^2 or cable (duplex).
- Transmission wiring should be done within the following limitations.
  If they are exceeded, transmission problems may occur.
  Between outdoor unit and indoor unit
  Between outdoor unit and outdoor unit of other systems
  Max. wiring length :1,000 m
  Max. total wiring length :2,000 m
  Max. no. of branches :16
  [Note]
  No branch is allowed after branch (**See figure 23**)
  Max. no. of outdoor units of other system that can be connected : 10
  Between outdoor unit and function unit
  Between outdoor unit and outdoor unit of same system
  Max.wiring length :30 m

(Refer to figure 23)

1. Branch
2. Branch after branch

- The transmission wiring inside the EL.COMPO.BOX should be secured using the clamp (1) as shown in figure 24.

(Refer to figure 24)

1. Outdoor unit
2. Function unit
3. Inside EL.COMPO.BOX
4. Fix two portions in the EL.COMPO.BOX with the included clamp (1).
5. Fix a single portion in the EL.COMPO.BOX with the included clamp (1).
6. Never connect power wiring.

- Outside the units, the transmission wiring must be finished simultaneously with the local refrigerant piping, and wound with tape (field supply) as shown in figure 25.

(Refer to figure 25)

1. Gas pipe
2. Liquid pipe
3. Transmission wiring
4. Insulation material
5. Finishing tape

- Wiring to other systems should be connected to terminals F1 and F2 (TO OUT/D UNIT) on the PC-board of the unit. Connecting the wires to the Q1, Q2 (TO MULTI UNIT) terminals results in malfunction.

7-5 Power Wiring Connection Procedure

- Be sure to connect the power supply wiring to the power supply terminal block and hold it in place using the included clamp (1) as shown in the figure 26.
- The ground wiring should be bound to the power wiring using the included clamp (1) to prevent outside force from being applied to the terminal.

(Refer to figure 26)

1. Power supply (3N ~ 50 Hz, 380 - 415 V)
2. Earth leakage circuit breaker
3. Fuse
4. Ground wiring
5. Outdoor unit
6. Function unit
7. Power supply terminal block
8. Ground terminal
9. Clamp (1) (accessories)
10. Power wiring and ground wiring (to power supply)
11. Attach the insulating sleeve.
12. Lay and connect from the upper side

Warning

Be sure to install an earth leakage circuit breaker.
The installation of an earth leakage circuit breaker is a must in order to prevent electric shock or fire prevention.

Note

- For wiring, use the designated power wire and connect firmly, then secure to prevent outside pressure being exerted on the terminal board.
- Be sure to use crimp-style terminal with insulating sleeves for connections. (See the figure below.)

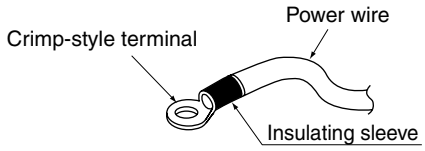

- When pulling the ground wire out, wire it so that it comes through the cut out section of the cup washer. (See the figure below.) An improper ground connection may prevent a good ground from being achieved.

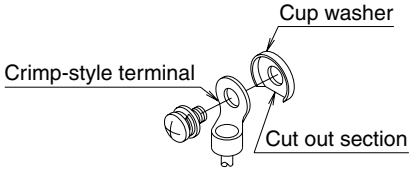

- When two wires are connected to a single terminal, connect them so that the rear sides of the crimp contacts face each other. Also, make sure the thinner wire is on top, securing the two wires simultaneously to the resin hook using the included clamp (1).

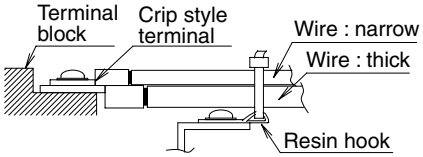

- Use an appropriate screwdriver for tightening the terminal screws. A screwdriver with a small head will strip the head and make proper tightening impossible.
  Over-tightening the terminal screws may break them.
  See the following table for the tightening torque of the terminal screws.

Screw size	Tightening torque (N·m)
M8 (Power and ground terminals of outdoor unit)	5.5 - 7.3
M5 (Power and ground terminals of outdoor unit)	2.0 - 3.0

7-6 Procedure for Wiring Inside Units

- Referring to figure 27 and 28, secure and wire the power and transmission wiring using the included clamp (1), (2), and (3).
- Wire so that the ground wiring does not come into contact with the compressor lead wiring.
  If they touch, this may have an adverse effect on other devices.
- Make sure all wiring do not contact to the pipes (hatching parts in the figure 27 and 28).
- The transmission wiring must be at least 50 mm away from the power wiring.

(Refer to figure 27)

1. For RTSQ8 to RTSQ12PAY1
2. For RTSQ14 and RTSQ16PAY1
3. In the case of pulling in the power wire and ground wire from the left-hand side.
4. Conduit
5. Stay
6. Fix to the stay with the included clamp (3).
7. Power wiring
8. Ground wiring
9. Transmission wiring
10. In the case of pulling in the power wire and ground wire from the right-hand side.
11. In the case of pulling in the transmission wire from the piping outlet.
12. In the case of pulling in the power wiring and ground wiring from the front side.
13. Separate at least 50 mm.
14. In the case of pulling in the transmission wiring from the front side.
15. Fix to the rear side of the side plate with the included clamp (2).
16. Support
17. Fix to the rear side of the support with the included clamp (1).
18. Fix to the rear side of the support with the included clamp (2).
19. Perform wiring carefully so that the sound blanket of the compressor will not be dismounted.

(Refer to figure 28)

1. For BTSQ20PY1
2. Power wiring
3. Ground wiring
4. Transmission wiring
5. In the case of pulling in the power wiring and ground wiring from the left-hand side.
6. In the case of pulling in the power wiring and ground wiring from the right-hand side.
7. Pull in the transmission wiring from the piping outlet.
8. Perform wiring (on both right- and left-hand sides) so that the sealing materials on the bottom of the EL.COMPO.BOX will not be deformed.
9. Perform wiring carefully so that the sound blanket of the compressor will not be dismounted.

Note

- After wiring work is completed, check to make sure there are no loose connections among the electrical parts in the EL.COMPO.BOX.

8. TESTS AND INSULATION WORK

Note

- Always use nitrogen gas for the airtightness test.
- Absolutely do not open the shutoff valve until the main power ciruit insulation measurement (refer to 8-3) has been completed. (measuring after the shutoff valve is opened will cause the insulation value to drop.)

8-1 Air tight test and vacuum drying

- After finished piping work, carry out air tight test and vacuum drying.

Note

- Be sure to conduct the airtight test and vacuum drying through the service port of the shutoff valves of the liquid pipe and gas pipe, and shutoff valve of the equalizer pipe (for the multi outdoor unit system only) of the outdoor unit and the service port of the liquid pipe and gas pipe of the function unit.
  See the [R410A] Label attached to the front plate of the each unit for details on the location of the service port (see figure at right).
- See **[Shutoff valve operation procedure]** in "**9-1 Before working**" for details on handling the shutoff valve.
- Pay attention to refrigerant leakage when connecting a charge hose to the refrigerant charge port. The refrigerant charge port is connected to the piping inside the product, and the piping is charged with refrigerant before shipping from the factory.

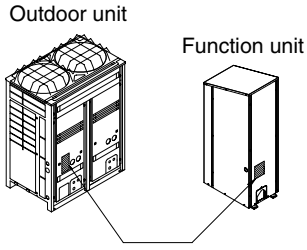

<Needed tools>

Gauge manifold Charge hose valve	• To prevent entry of any impurities and insure sufficient pressure resistance, always use the special tools dedicated for R410A. • Use charge hose that have pushing stick for connecting to service port of shutoff valves or refrigerant charge port.
Vacuum pump	• Take care the pump oil never flow backward into the refrigerant pipe during the pump stops. • The vacuum pump for vacuum drying should be able to lower the pressure to –100.7kPa (5 Torr –755mm Hg).

<The system for air tight test and vacuum drying>

- Referring to figure 29, connect an nitrogen tank, refrigerant tank, and a vacuum pump to the outdoor unit and function unit.
  The refrigerant tank and the charge hose connection to refrigerant charge port or the valve A in figure 29 are needed in "**9. ADDITIONAL REFRIGERANT CHARGE AND CHECK OPERATION**".

(Refer to figure 29)

1. Gauge manifold
2. Nitrogen
3. Measuring device
4. R410A tank (with siphon)
5. Vacuum pump
6. Charge hose
7. Refrigerant charge port
8. Liquid pipe shutoff valve
9. Gas pipe shutoff valve
10. Equaliger pipe shutoff valve
11. Outdoor unit A
12. Outdoor unit B (for multi outdoor unit system)
13. Function unit
14. Liquid pipe service port
15. Gas pipe service port
16. Valve A
17. Valve C
18. Valve B
19. The equalizer piping requires an airtight test and vacuum drying only for the multi outdoor unit system.
20. To indoor unit
21. Local piping
22. Airflow
23. Shutoff valve
24. Service port

<Air tight test>

Pressurize the liquid pipe, gas pipe and the equalizer pipe (for the multi outdoor unit system only) from the each shutoff valve service ports of outdoor unit and the service ports of function unit to 4.0 MPa (40 bar) (do not pressurize more than 4.0 MPa (40 bar)).
If the pressure does not drop within 24 hours, the system passes the test.
If there is a pressure drop, check for leaks, make repairs and perform the airtight test again.

<Vacuum drying>

Evacuate the liquid pipe, gas pipe and the equalizer pipe (for the multi outdoor unit system only) from the each shutoff valve service ports of outdoor unit and the service ports of function unit by using a vacuum pump for more than 2 hours and bring the system to –100.7 kPa or less. After keeping the system under that condition for more than 1 hour, check if the vacuum gauge rises or not. If it rises, the system may either contain moisture inside or have leaks.

Note

[Airtight test and vacuum drying while in Evaculation mode setting]
When all the electrical work on the system including the indoor unit is finished and it is safe to supply power to the system, turn ON the entire system and set the Evaculation mode setting (service mode) through the PCB (A1P) of the outdoor unit. All the connection piping and indoor unit excluding the equalizer piping can be airtight tested and vacuum dried through the liquid pipe service port of the function unit. Furthermore, refrigerant charging through the liquid piping is possible while the system is not in operation. Refrigerant charging is not possible while the system is in operation.
For the details of the Evaculation mode setting, refer to the [Service precautions] label (below) on the EL.COMPO.BOX lid of the outdoor unit.

If moisture might enter the piping, follow belows.
(I.e., if doing work during the rainy season, if the actual work takes long enough that condensation may form on the inside of the pipes, if rain might enter the pipes during work, etc.)

(1) After performing the vacuum drying for two hours, pressurize to 0.05 MPa (i.e., vacuum breakdown) with nitrogen gas, then depressurize down to –100.7 kPa for an hour using the vacuum pump (vacuum drying).
(2) If the pressure does not reach –100.7 kPa even after depressurizing for at least two hours, repeat the vacuum breakdown - vacuum drying process.
(3) After then, maintain the vacuum for an hour and make sure the pressure does not rise by monitoring with a vacuum gauge.

8-2 Pipe insulation

- Insulation of pipes should be done after performing "**8-1 Air tight test and vacuum drying**".
- Always insulate the liquid pipe, gas pipe and equalizer pipe (the piping between the outdoor units in the case of the multi outdoor unit system) and these pipe connections. Failing to insulate the pipes may cause leaking or burns.
  And be sure to use the insulation which can withstand such temperatures of 120°C or more for the gas piping because the high pressure gas follows in these pipings.
- Thermal insulate the liquid pipe and gas pipe of the function unit up to the point immediately before the piping support in the function unit. **(Refer to figure 30)**
- If there is a possibility that condensation on the shutoff valve might drip down into the indoor unit through gaps in the insulation and piping because the function unit is located higher than the indoor unit, etc., this must be prevented by caulking the connections, etc. **(Refer to figure 30)**

(Refer to figure 30)

1. Piping support
2. Gas pipe (to outdoor unit)
3. Liquid pipe (to outdoor unit)
4. Thermal insulator end (4 points)
5. Perform caulking processing.
6. Liquid pipe (to indoor unit)
7. Gas pipe (to indoor unit)

- Reinforce the insulation on the refrigerant piping according to the installation environment. Condensation might form on the surface of the insulation. Refer to the below.
  - Ambient temperature : 30°C, humidity : 75% to 80% RH : min. thickness : 15mm.
  - If the ambient temperature exceeds 30°C and the humidity 80% RH, then the min. thickness is 20mm.
    See the Engineering data book for detail.
- The piping lead-out hole lid should be attached after opening a knock hole.
  If small animals and the like might enter the unit through the piping lead-out hole, close the hole with blocking material (procured on site) after completion of "**9. ADDITIONAL REFRIGERANT CHARGE AND CHECK OPERATION**". **(Refer to figure 31)**

(Refer to figure 31)

1. Piping lead-out hole lid
2. Open a knock hole at "▨".
3. Block "▨".

Note

- After knocking out the holes, we recommend you remove burrs in the knock holes (**See figure 31**) and paint the edges and areas around the edges using the repair paint.

8-3 Checking of device and installation conditions

Be sure to check the followings.

For those doing electrical work

1. Make sure there is no faulty transmission wiring or loosing of a nut.
   See "**7-4 Transmission Wiring Connection Procedure**".
2. Make sure there is no faulty power wiring or loosing of a nut.
   See "**7-5 Power Wiring Connection Procedure**".
3. Has the insulation of the main power circuit deteriorated?
   Measure the insulation and check the insulation is above regular value in accordance with relevant local and national regulations.

Prohibition

Do not use a insulation resistance tester to light electric circuits (e.g., transmission wire terminals between outdoor and indoor units).

For those doing pipe work

1. Make sure piping size is correct.
   See "**6-1 Selection of piping material and Refrigerant branching kit**".
2. Make sure insulation work is done.
   See "**8-2 Pipe insulation**".
3. Make sure there is no faulty refrigerant piping.
   See "**6. REFRIGERANT PIPING**".

9. ADDITIONAL REFRIGERANT CHARGE AND CHECK OPERATION

The outdoor unit is charged with refrigerant when shipped from the factory, but depending on the size and length of the piping when installed, it may require additional charging.
For charging the additional refrigerant, follow the procedure in this chapter.
And then carry out the check operation.

Warning **Electric Shock Warning**

- Make sure to close the EL. COMPO. BOX (both outdoor unit and function unit) lid before turning on the power.
- Perform the setting on the PC-board (A1P) of the outdoor unit and check the LED display after the power is on via the inspection door which is in the EL. COMPO. BOX lid. **(Refer to figure 32)**
- Use an insulated rod to operate the push buttons via the EL. COMPO. BOX's inspection door. **(Refer to figure 32)**
  There is a risk of electric shock if you touch any live parts, since this operation must be performed with the power on.

(Refer to figure 32)

1. Inspection door
2. EL. COMPO. BOX
3. [Service precautions] label (upper)
4. [Service precautions] label (lower)
5. Outdoor unit
6. Function unit
7. EL. COMPO. BOX lid
8. LED (H1~8P)
9. Push button (BS1~5)
10. Lift the protruding part to open the inspection door.

Caution

- Make sure to use the protect tool (protective groves and goggles) when charging the refrigerant.
- Do not perform the refrigerant charging operation under working for the indoor unit.
- When opening the front panel, make sure to take caution to the fan rotation during the working.
  After the outdoor unit stops operating, the fan may keep rotation for a while.
- Due to a danger of liquid hammer, the refrigerant must not be charged over the allowable maximum amount when charging the refrigerant.

Note

- If operation is performed within 12 minutes after the indoor, outdoor and function units are turned on, H2P will be lit on and the compressor will not operate.
- In order to ensure uniform refrigerant distribution, it may take up to around 10 minutes for the compressor to start up after the unit starting operating. This is not a malfunction.
- Be careful when connecting the charge hose. The refrigerant charge port is connected to the piping inside the unit.
  When the unit is shipped from the factory, the unit's internal piping is already charged with refrigerant.
- When done or when pausing the refrigerant charging operation, close the valve of the refrigerant tank immediately.
  The refrigerant charge port of this product have electric expansion valve.
  The valve will be closed at end of refrigerant charging. However the valve will be opened on operation after refrigerant charging (check operation, nomal operation, etc.).
  If the tank is left with the valve open, the amount of refrigerant which is properly charged may be off the point.
- See [Shutoff valve operation procedure] in chapter 9-1 for details on how to handle shutoff valves.
- After adding the refrigerant, make sure to close the lid of the refrigerant charging port.
  The tightening torque for the lid is 11.5 to 13.9 Nm.
- Make sure to perform the check operation after installation. Otherwise, the malfunction code "U3" will be displayed and normal operation cannot be performed.
  And the failure of "Check of miswiring" may also cause abnormal operation. Performance may drop due to the failure of "Judgment of piping length".
- Check operation must be performed for each refrigerant piping system.
  Checking is impossible if plural systems are being done at once.
- The individual problems of indoor units can not be checked.
  About these problems check by test run after the check operation is completed. (See chapter 10)
- The check operation cannot be performed in recovery or other service modes.

9-1 Before working

[About the refrigerant tank]
Check whether the tank has a siphon pipe before charging and place the tank so that the refrigerant is charged in liquid form.
(See the figure below.)

With siphon pipe	
	Stand the tank upright and charge. (The siphon pipe goes all the way inside, so the tank does not need be put upside-down charge in liquid form.)
Other tanks	
	Stand the tank upside-down and charge.

Note

- Always use the proper refrigerant (R410A). If charged with the refrigerant containing an improper material, it may cause an explosion or accident.
- R410A is a mixed refrigerant, so charging it as a gas will cause the refrigerant composition to change, which may prevent normal operation.

[Shutoff valve operation procedure]
When operating the shutoff valve, follow the procedure instructed below.

Note

- Do not open the shutoff valve until "**8-3 Checking of device and installation conditions**" are completed. If the shutoff valve is left open without turning on the power, it may cause refrigerant to buildup in the compressor, leading insulation degradation.
- Be sure to use the correct tools.
  The shutoff valve is not a back-seat type. If forced it to open, it might break the valve body. **(Refer to figure 33)**
- When using a service port, use the charge hose.
- After tightening the cap, make sure no refrigerant gas is leaking.

Tightening torque

The sizes of the shutoff valves on each model and the tightening torque for each size are listed in the table below.

<Size of Shutoff Valve>

<table>
<tr><th></th><th>8HP type</th><th>10HP type</th><th>12HP type</th><th>14HP type</th><th>16HP type</th></tr>
<tr><td>Liquid pipe shutoff valve</td><td colspan="3">ϕ9.5
The 12HP type corresponds to the 12.7-diameter onsite piping using the accessory pipe.</td><td colspan="2">ϕ12.7</td></tr>
<tr><td>Gas shutoff valve</td><td colspan="5">ϕ19.1
The 8 · 10HP type corresponds to the 22.2-diameter onsite piping using the accessory pipe.
The 12-16 HP type corresponds to the 28.6-diameter onsite piping using the accessory pipe.</td></tr>
<tr><td>Equaliger pipe shutoff valve</td><td>ϕ19.1</td><td></td><td>ϕ19.1</td><td></td><td></td></tr>
</table>

<Tightening torque>

<table>
<tr><td rowspan="2">Shutoff valve size</td><td colspan="3">Tightening torque N·m (Turn clockwise to close)</td><td>Service port</td></tr>
<tr><td colspan="2">Shaft (valve body)</td><td>Cap (valve lid)</td><td></td></tr>
<tr><td>ϕ 9.5</td><td>5.4 - 6.6</td><td rowspan="2">Hexagonal wrench 4 mm</td><td>13.5 - 16.5</td><td rowspan="3">11.5 - 13.9</td></tr>
<tr><td>ϕ 12.7</td><td>8.1 - 9.9</td><td>18.0 - 22.0</td></tr>
<tr><td>ϕ 19.1</td><td>27.0 - 33.0</td><td>Hexagonal wrench 8 mm</td><td>22.5 - 27.5</td></tr>
</table>

(Refer to figure 33)

1. Service port
2. Cap
3. Hex holes
4. Shaft (valve body)
5. Seal section

To open

1. Remove the cap and turn the shaft counterclockwise with the hexagon wrench (JISB4648).
2. Turn it until the shaft stops.
3. Make sure to tighten the cap securely.
   (For the tightening torque, refer to the item <Tightening Torque>.)

To close

1. Remove the cap and turn the shaft clockwise with the hexagon wrench (JISB4648).
2. Securely tighten the valve until the shaft contacts the main body seal.
3. Make sure to tighten the cap securely.
   (For the tightening torque, refer to the item <Tightening Torque>.)

[How to Check How Many Units are Connected]

It is possible to find out how many indoor or outdoor (function) unit in the system are turned on by operating the push button on the PC-board (A1P) of outdoor unit (In case of multi system master unit).

Follow the procedure below to check how many indoor or outdoor units are turned on.

(LED display: ● ...OFF ☼ ...ON ◑ ...Blinking ＊...Uncertain)		LED display						
		H1P	H2P	H3P	H4P	H5P	H6P	H7P
(1) Press the MODE button (BS1) once at **Setting Mode 1** (H1P : off), and set the MONITOR MODE (H1P : Blinking).		◑	●	●	●	●	●	●
(2) Press the SET button (BS2) the number of times until the LED display matches that at right.	For checking the number of outdoor units (*1) : eight times	◑	●	●	☼	●	●	●
	For checking the number of indoor units : five times	◑	●	●	●	☼	●	☼
(3) Press the RETURN button (BS3) and read the number of units from the display of H2P through H7P. [Reading Method] The display of H2P through H7P should be read as a binary number, with ◑ standing for "1" and ● standing for "0".		◑	＊	＊	＊	＊	＊	＊
Ex: For the LED display at right, this would be "0 1 0 1 1 0 ", which would mean 22 units are connected. $32 \times \mathbf{0} + 16 \times \mathbf{1} + 8 \times \mathbf{0} + 4 \times \mathbf{1} + 2 \times \mathbf{1} + 1 \times \mathbf{0} = 22$ units Note: "000000" indicates 64 units.		◑	●	◑	●	◑	◑	●
(4) Press the MODE button (BS1) once. This returns to **Setting Mode 1** (H1P : OFF, default).		●	●	☼	●	●	●	●

(*5) The number include the function unit.

Note

Press the "MODE button" (BS1) if you get confused while operating. This returns to **Setting Mode 1** (H1P : OFF, default).

9-2 Procedure of Additional Refrigerant charging

1. Make sure the following works are complete in accordance with the installation manual.
- Piping work
- Wiring work
- Air tight test and Vacuum drying
- Installation work for indoor unit

2. Calculate the "additional charging amount" using "How to calculate the additional refrigerant to be charged" in "**6-5 Example of connection**".

3. Open the valve B (**See the figure 34**. The valve A,C and the shut-off valves of outdoor unit must be left closed), and charge the refrigerant of the "additional charging amount" from the liquid pipe service port of function unit.

4. Close valve B when the refrigerant is charged as much as possible. **(Refer to figure 34)**

5. Perform the automatic refrigerant charging operation according to the [Automatic refirgerant charging operation procedure] and fill the remaining quantity of refrigerant.
Go to step 6 if the additional quantity of refrigerant to be replenished is known and no automatic charging operation is performed or the contraction of working hours is required.

6. If the additional quantity of refrigerant was not replenished in step 5 (automatic refrigerant charging operation), perform the additional refrigerant charging operation in service mode and replenish the refrigerant through the refrigerant charging port.
Refer to the "Additional refrigerant charging method" described in the [Service precautions] label (below) on the EL.COMPO.BOX lid of the outdoor unit for the additional refrigerant charging operation in service mode.

7. After completing the additional refrigerant charging, record the charging amount on the accessory "REQUEST FOR THE INDICATON" label (Installation records) and adhere it to the back side of the front panel. Also, record the factory charged refrigerant amount, additional refrigerant amount in the field and total refrigerant amount of the system to "Refrigerant charge label" and adhere in the proximity of the refrigerant charge port.
About "Refrigerant charge label", refer to [Important information regarding the refrigerant used] in "**1-2 Special notice of product**".

(Refer to figure 34)

1. Measuring device
2. R410A tank (with siphon)
3. Charge hose
4. Refrigerant charge port
5. Liquid pipe shutoff valve
6. Gas shutoff valve
7. Equaliger pipe shutoff valve
8. Outdoor unit A
9. Outdoor unit B (for multi outdoor unit)
10. Function unit
11. Liquid pipe service port
12. Gas pipe service port
13. Valve A
14. Valve C
15. Valve B
16. To indoor unit
17. Local piping
18. Flow of refrigerant
19. Shutoff valve
20. Service port

[Automatic refirgerant charging operation procedure]

Note

- For performing the automatic refrigerant charging operation, the push button on the PC-bord (A1) of outdoor unit are used. (See figure 32.)
  And the refrigerant are charged from the refrigerant charge port via the valve A. (See figure 34.) For operating the push button and opening or closeing the valves, follow the procedure.

- During Automatic refrigerant charging operation, the system will select charging mode (cooling mode or heating mode) by the temperature condition as follows.

  Outdoor temp. : 0˚C DB ~ 43˚C DB
  Indoor temp. : 10˚C DB ~ 32˚C DB ➡ Cooling mode

  Less than above range ➡ Heating mode

  When cahrging in cooling mode, the system will stop operation when the required amount of refrigerant is charged.

During charging in heating mode, a person must manually close valve A and stop operation.
Beforehand, check the remaining refrigerant that is needed to charge based on the “additional charging amount” in step 2 and the charged amount in step 3.

- The refrigerant will be charged about 30kg in one hour at outdoor temp. 30°C DB (about 12kg at outdoor temp. 0°C DB).
  (The charging speed of refrigerant may increase depending on the quantity of remaining refrigerant in the tank or outdoor temperature.)
- During Automatic refrigerant charging operation, you can stop the operation forcedly by pushing MODE button (BS1).
- The marks of LED mean as follows.
  ● : OFF ☼ : ON ◑ : Blinking ＊ : OFF, ON or Brinking

(1) Open the shutoff valves of the liquid pipe and gas pipe, and shutoff valve of equalizer pipe (in the case of the multi outdoor unit system). (The valve A to C must be closed. See figure 34.)
(2) • Close the EL. COMPO. BOX lid and all front panel except on the EL. COMPO. BOX side. (*1) And turn the power to the outdoor unit, function unit and all connected indoor units. (*2)
• After H2P stop blinking (about 12 minutes after turning on the power), check H2P is OFF.
If H2P is ON, check the malfunction code in the remote controller of indoor unit and correct the malfunction in accordance with [Remote controller display malfunction code] in chapter 9-3.

Note

All operation is done through outdoor unit (in case of multi outdoor unit system, master unit)
Distinguish the master and slave of the multi outdoor unit system through the state of the H8P (MULTI) LED indicators.

☼ (ON)	Master
◑ (Blinking) or ● (OFF)	Slave

Furthermore, the master and slave can be distinguished by checking whether the transmission wire to the indoor unit is connected or not.

Transmission wire is connected	Master
Transmission wire is not connected	Slave

(3) Check the LED. And push the MODE button (BS1) once if the LED displays is not as below.

H1P	H2P	H3P	H4P	H5P	H6P	H7P
●	●	☼	●	●	●	●

(4) Push the TEST button (BS4) once. (The LED displays will change as below.)

H1P	H2P	H3P	H4P	H5P	H6P	H7P
☼	☼	☼	☼	☼	☼	☼

(5) Hold the TEST button (BS4) down for 5 seconds or more.
(The LED displays will change as below and fan of outdoor unit will start rotation.)

H1P	H2P	H3P	H4P	H5P	H6P	H7P
●	◑	●	●	●	＊	＊

(6) When the compressor start working and the LED displays change any state in below (*3), go to “In case of cooling mode” or “In case of heating mode” in accordance with the LED displays.

H1P	H2P	H3P	H4P	H5P	H6P	H7P	
◑	◑	◑	●	☼	●	☼	➡ Go to “In case of cooling mode”
◑	◑	●	●	☼	●	☼	➡ Go to “In case of heating mode”

In case of cooling mode

(7) Push the TEST button (BS4) once within 5 minutes after procedure (6) (*4) and close the all front panels (*5).
After that, open the valve A immediately (See figure 34) (*6) and watch the remote controller display of indoor unit.
(8) If the remote controller display shows “PE” code (*7), ready to close the valve A.
And go to procedure (9).
If the remote controller display shows other code, close the valve A immediately and refer to [Remote controller cooling mode malfunction code]

⚠ **Beware the fan running when open the front panel.**
The fan may continue rotation after the system stop the operation.

(9) When the compressor stop working (the fan may continue rotation.), close the valve A immediately (*8).
And check the LED displays are as below and the remote controller display shows “P9” code.

H1P	H2P	H3P	H4P	H5P	H6P	H7P
☼	◑	◑	☼	☼	☼	☼

After checking, push the MODE button (BS1) once and the charging is complete.

In case of heating mode

(7) Push the TEST button (BS4) once within 5 minutes after procedure (6) (*4) and close the all front panels.
After that, open the valve A immediately (See figure 34) (*6) and check the charged amount by meauring device.
During operation, if the remote controller display shows “P2” or “P8” code, close the valve A immediately and refer to [Remote controller heating mode malfunction code].

⚠ **Beware the fan running when open the front panel.**
The fan may continue rotation after the system stop the operation.

(8) When the required amount of refrigerant is charged, close the valve A (See figure 34) (*8) and push the RETURN button (BS3) once. And then go to procedure (9).
(9) Push the MODE button (BS1) once, and the charging is complete.

Notes (*1)~(*8)

(*1) Lead the refrigerant charge hose etc from the pipe intake.
All front panels must be closed at the procedure (7).
(*2) • If you perform the refrigerant charging operation within the refrigerant system that have the power off unit, the operation cannot finish properly.
Check the number of outdoor and indoor units that is powered. For checking, see [How to check how many units are connected] in chapter 9-1.
• To energize the crankcase heater, make sure to turn on for 6 hours before starting operation.
(*3) It takes about 2~10 minutes for getting stability of refrigerant state.
If the additional refrigerant is little and operation is started before getting stability, the system can not judge the charging amount precisely and it cause over charge.
(*4) If the TEST button (BS4) is not pushed within 5 minutes, “P2” code will displayed in the remote controller. In this case, refer [Remote controller cooling (or heating) mode malfunction code].
(*5) If the front panel is opened during the operation, the system cannot operate properly.
(*6) If you leave the system without connecting the refrigerant tank or opening the valve A for 30 minutes or more, the system stop operation and “P2” code are displayed in remote controller.
In this case, refer [Remote controller cooling (or heating) mode malfunction code].
(*7) Depending on the situation of operation such as the charging amount is little, the “PE” code may not be displayed and the “P9” code may be displayed.
(*8) Always close the valve A and take the tank off.
The refrigerant charge port of this unit have electric expansion valve and the valve are closed when charging is finished. However, the valve will opened when ather operation (Check operation, nomal operation, etc.). If you leave the tank connected, the refrigerant will charged and it cause over charge.

[Remote controller cooling mode malfunction code]

Code	The work contents	
PE	Charging is almost finished. Ready to close the valve A.	
PA PH	The refrigerant tank is empty. Close the valve A and replace empty tank to the new tank. After changing the tank, open the valve A again. ⚠ **Beware the fan running. The outdoor unit does not stop operation.**	
P8	Close the valve A immediately, and restart the operation from procedure (3).	
P2	Operation is interrupted. Close the valve A immedeately and check the below items. • Check if the shutoff valves of liquid pipe and gas pipe, and shutoff valve of equalizer pipe (in the case of the outdoor unit multi system) is opened. • Check the refrigerant tank is connected and the valve A was opend. • Check if the air inlet and outlet of the indoor unit are not closed by an obstruction.	After correcting the abnormality, restart the operation from procedure (3).
*	Operation is stoped abnormally. Close the valve A immediately. Confirm the malfunction code and correct the abnormality following the [Remote controller displays malfunction code] in chapter 9-2.	
P9	Charging is finished. Close the valve A and take the refrigerant tank off.	

[Remote controller heating mode malfunction code]

Code	The work contents
P8	Close the valve A immediately and push the TEST button (BS4) once. And restart from procedure (7) of "In case of heating mode".
P2	Operation is interrupted. Close the valve A immedeately and check the below items. • Check if the shutoff valves of liquid pipe and gas pipe, and shutoff valve of equalizer pipe (in the case of the outdoor unit multi system) is opened. • Check the refrigerant tank is connected and the valve A was opend. • Check if the air inlet and outlet of the indoor unit are not closed by an obstruction.

9-3 Procedure of check operation

- Check operation perform the following work. Do the check operation following below.
  Otherwise, malfunction code "U3" will be displayed in the remote controller and nomal operation can not be carried out.
  - ■ Check of shutoff valve opening
  - ■ Check of miswiring
  - ■ Judgment of piping length
  - ■ Check of refrigerant overcharge (*)

  * Over charging is judged only when the automatic charging operation in cooling mode is not performed.

Note
- Check operation can not carried out at outdoor temp. less than –5°C. Perform the check operation at day or time that outdoor temp. is –5°C or more.
- For interrupting the check operation, push RETURN button (BS3).

[Check Operation Procedure]

(1) Close the EL. COMPO. BOX lid and all front panels except as the side of the EL. COMPO. BOX and turn on the power to the outdoor unit, function unit and all connected indoor units. (Be sure to turn the power on at least 6 hours before operation in order to have power running to the crank case heater.)

(2) Make the onsite settings as needed using the push button (BS1-BS5) on the outdoor unit PC-board (A1P) with the power on. (See "**10. ONSITE SETTINGS**")

(3) Perform the check operation following the Check Operation Method of the [Service Precautions] label (lower) on the EL. COMPO. BOX lid (see figure 32). The system operation for about 45~60 minutes and automatically stops the check operation.
If the malfunction code is not displayed in the remote controller after the system stop, check operation is completed. Normal operation will be possible after 5 minutes. If the malfunction code is displayed in the remote controller, correct the malfunction following [Remote controller displays malfunction code] and perform the check operation again.

[Remote controller displays malfunction code]

Malfunction code	Installation error	Remedial action
E3, E4 F3, F6 UF	The shutoff valve of the outdoor unit is left closed.	Open the shutoff valve.
U1	The phases of the power to the outdoor unit is reversed.	Exchange two of the three phases (L1, L2, L3) to make a proper connection.
U1 U4 LC	No power is supplied to an outdoor, BS or indoor unit (including phase interruption).	Make sure the power source wire is properly connected to the outdoor, BS or indoor unit and revise if necessary.
UF	There is conflict on the connection of transmission wiring in the system.	Check if the refrigerant piping line and the transmission wiring are consistent with each other.
E3 F6 UF	Refrigerant overcharge.	Recalculate the additional amount refrigerant from the piping length and correct the refrigerant charge level by recovering any excessive refrigerant with a refrigerant recovery machine.
E4 F3	Insufficient refrigerant.	• Check if the additional refrigerant charge has been finished correctly. • Recalculate the additional amount refrigerant from the piping length and add the adequate amount.
U7, U4 UF, UH	Field wiring is connected to "TO MULTI UNIT (Q1,Q2)" terminal on the outdoor unit PC-board (A1P) when the system is one outdoor system.	Remove the line from the "TO MULTI UNIT (Q1, Q2)" terminal.

Note
If any malfunction codes other than the above are displayed, check the service manual for how to respond.

10. ONSITE SETTINGS

Use the push button switches (BS1 through BS5) on the outdoor unit PC-board (A1P) to make the necessary onsite settings.
See the "Service Precautions" label (upper) on the EL. CONPO. BOX lid for details on the positions and operating method of the push button switches and on the onsite setting. (see figure 32)
Make sure to record the setting on the accessory "REQUEST FOR THE INDICATION" label.

⚠ Warning ⚠ Electric Shock Warning

Use an insulated rod to operate the push buttons via the inspection door of EL. COMPO. BOX lid.
There is a risk of electric shock if you touch any live parts, since this operation must be performed with the power on.

11. TEST RUN

11-1 Before test run

- Make sure the following works are completed in accordance with the installation manual.
  - Piping work
  - Wiring work
  - Air tight test and vacuum drying
  - Additional refrigerant charge
  - Check operation
- Check that all work for the BS, indoor unit are finished and there are no danger to operate.

11-2 Test Run

After all works are completed, operate the unit normally and check the following.

(1) Make sure the indoor and outdoor units are operating normally.
(2) Operate each indoor unit one by one and make sure the corresponding outdoor unit is also operating.
(3) Check to see if cold (or hot) air is coming out from the indoor unit.
(4) Push the fan direction and strength buttons on the remote controller to see if they operate properly.

Note

- Heating is not possible if the outdoor temperature is 24°C or higher. Refer to the Operation manual.
- If a knocking sound can be heard in the liquid compression of the compressor, stop the unit immediately and then energize the crank case heater for a sufficient length of time before restarting the operation.
- Once stopping, the compressor will not restart in about 5 minutes even if the On/Off button of the remote controller is pushed.
- When the system operation is stopped by the remote controller, the outdoor units may continue operating for further 5 minutes at maximum.
- The outdoor unit fan may rotate at low speeds if the Night-time low noise setting or the External low noise level setting is made, but this is not a malfunction.
- If the check operation was not performed at first istallation, the malfunction code “U3” will be displayed in the remote controller. Perform the check operation following “**9-3 Procedure of Check Operation**”.

11-3 Checks After Test Run

Perform the following checks after the test run is complete.

- Record the contents of field setting.
  → Record them on the accessory “REQUEST FOR THE INDICATION” label.
  And attach the label on the back side of the front panel.
- Record the installation date.
  → Record the installation date on the accessory “REQUEST FOR THE INDICATION” label in accordance with the IEC60335-2-40.
  And attach the label on the back side of the front panel.

Note

After the test run, when handing the unit over to the customer, make sure the EL.COMPO.BOX lid, the inspection door, and the unit casing are all attached.

12. CAUTION FOR REFRIGERANT LEAKS

(Points to note in connection with refrigerant leaks)

Introduction

The installer and system specialist shall secure safety against leakage according to local regulations or standards. The following standards may be applicable if local regulations are not available.
The VRV System, like other air conditioning systems, uses R410A as refrigerant. R410A itself is an entirely safe non-toxic, non-combustible refrigerant. Nevertheless care must be taken to ensure that air conditioning facilities are installed in a room which is sufficiently large. This assures that the maximum concentration level of refrigerant gas is not exceeded, in the unlikely event of major leak in the system and this in accordance to the local applicable regulations and standards.

Maximum concentration level

The maximum charge of refrigerant and the calculation of the maximum concentration of refrigerant is directly related to the humanly occupied space in to which it could leak.
The unit of measurement of the concentration is kg/m^3 (the weight in kg of the refrigerant gas in 1m^3 volume of the occupied space).
Compliance to the local applicable regulations and standards for the maximum allowable concentration level is required.
In Australia the maximum allowed concentration level of refrigerant to a humanly space is limited to 0.35kg/m^3 for R407C and 0.44kg/m^3 for R410A.

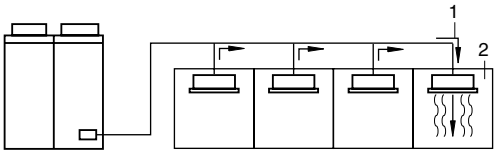

1. direction of the refrigerant flow
2. room where refrigerant leak has occurred (outflow of all the refrigerant from the system)

Pay a special attention to the place, such as a basement, etc. where refrigerant can stay, since refrigerant is heavier than air.

Procedure for checking maximum concentration

Check the maximum concentration level in accordance with steps 1 to 4 below and take whatever action is necessary to comply.

1. Calculate the amount of refrigerant (kg) charged to each system separately.

amount of refrigerant in a single unit system (amount of refrigerant with which the system is charged before leaving the factory)	+	additional charging amount (amount of refrigerant added locally in accordance with the length or diameter of the refrigerant piping)	=	total amount of refrigerant (kg) in the system

Note

- Where a single refrigerant facility is divided into 2 entirely independent refrigerant systems then use the amount of refrigerant with which each separate system is charged.

2. Calculate the smallest room volume (m^3)
Incase like the following, calculate the volume of (A), (B) as a single room or as the smallest room.

A. Where there are no smaller room divisions

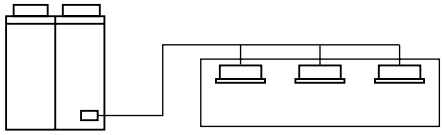

B. Where there is a room division but there is an opening between the rooms sufficiently large to permit a free flow of air back and forth.

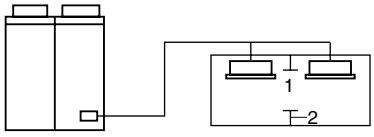

1. opening between rooms
2. partition

(Where there is an opening without a door or where there are openings above and below the door which are each equivalent in size to 0.15% or more of the floor area.)

3. Calculating the refrigerant density using the results of the calculations in steps 1 and 2 above.

$$\frac{\text{total volume of refrigerant in the refrigerant system}}{\text{size } (m^3) \text{ of smallest room in which there is an indoor unit installed}} \leq \text{maximum concentration level } (kg/m^3)$$

If the result of the above calculation exceeds the maximum concentration level then make similar calculations for the second then third smallest room and so until the result falls short of the maximum concentration.

4. Dealing with the situations where the result exceeds the maximum concentration level.
Where the installation of a facility results in a concentration in excess of the maximum concentration level then it will be necessary to revise the system. Please consult your Daikin supplier.

NOTES